


Controls in detail


Seats

Folding out the folding bench seat

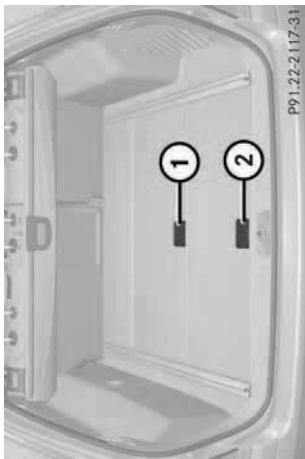

- 1** The rear seat backrests can be adjusted to a more reclined position to make the folding bench seat more comfortable (▷ page 233).

- ▶ Pull release handle ① and fold seat backrest for the folding bench seat upward.
- ▶ Hook seat belts into mountings ③.
- ▶ Pull release handle ② and fold seat cushion for the folding bench seat into sitting position.
- ▶ Press seat cushion as far down as it will go.
- ▶ Fold head restraints into upright position.
The backrest will then also engage properly.

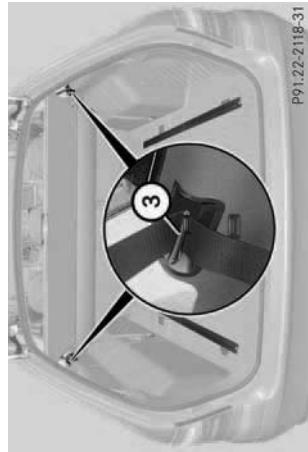

P9.122-2118-31

- ① Release handle for seat backrest
② Release handle for seat cushion

Before folding out the seat backrest, you must:

- fold the rear seat backrests into an upright position and lock them into place
- move the handle for the twin roller blind into the upper position


- ③ Mountings for seat belts

Controls in detail

Seats

1 You must remove the seat cushion when you want to raise the loading floor, e.g. in the event of a flat tire.

Removing

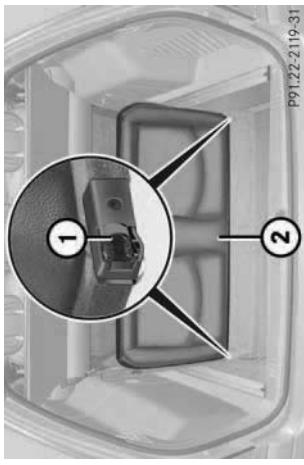


P91222119-31

- ① Seat guides
- ② Seat cushion

► Fold seat cushion ② upward and remove it from seat guides ①.


Installing

Folding back folding bench seat

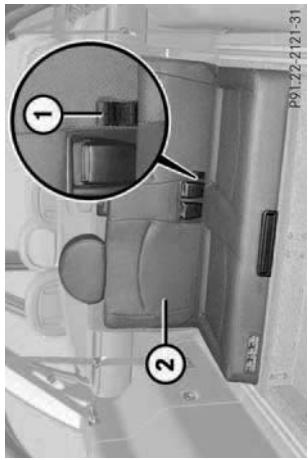


P91222121-31

- ① Tab
- ② Backrest
- Pull seat cushion upward using tab ① and fold it back into original position until it engages.

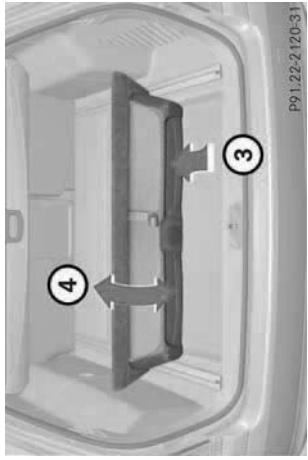

P91222120-31

- Insert seat cushion ④ into seat guides ③ from behind ③ at a slight angle.
- Fold seat cushion ④ back into original position ④ until it engages.

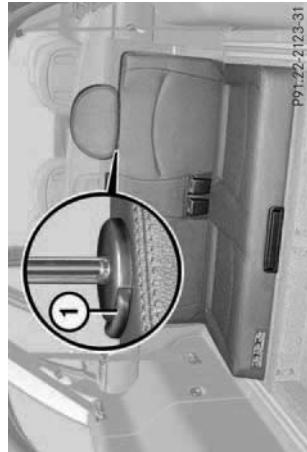

① Release knob

► Press release knob ① and fold head restraints down.

- Press release catch ① and push head restraints as far in as they will go.
- Fold seat backrest of folding bench seat back into original position until it engages.

! To avoid damage, insert the head restraints completely into their guides and engage the seat belt buckles in their guides.

