


AR00.60-P-1000GH


Raising, jacking up vehicle

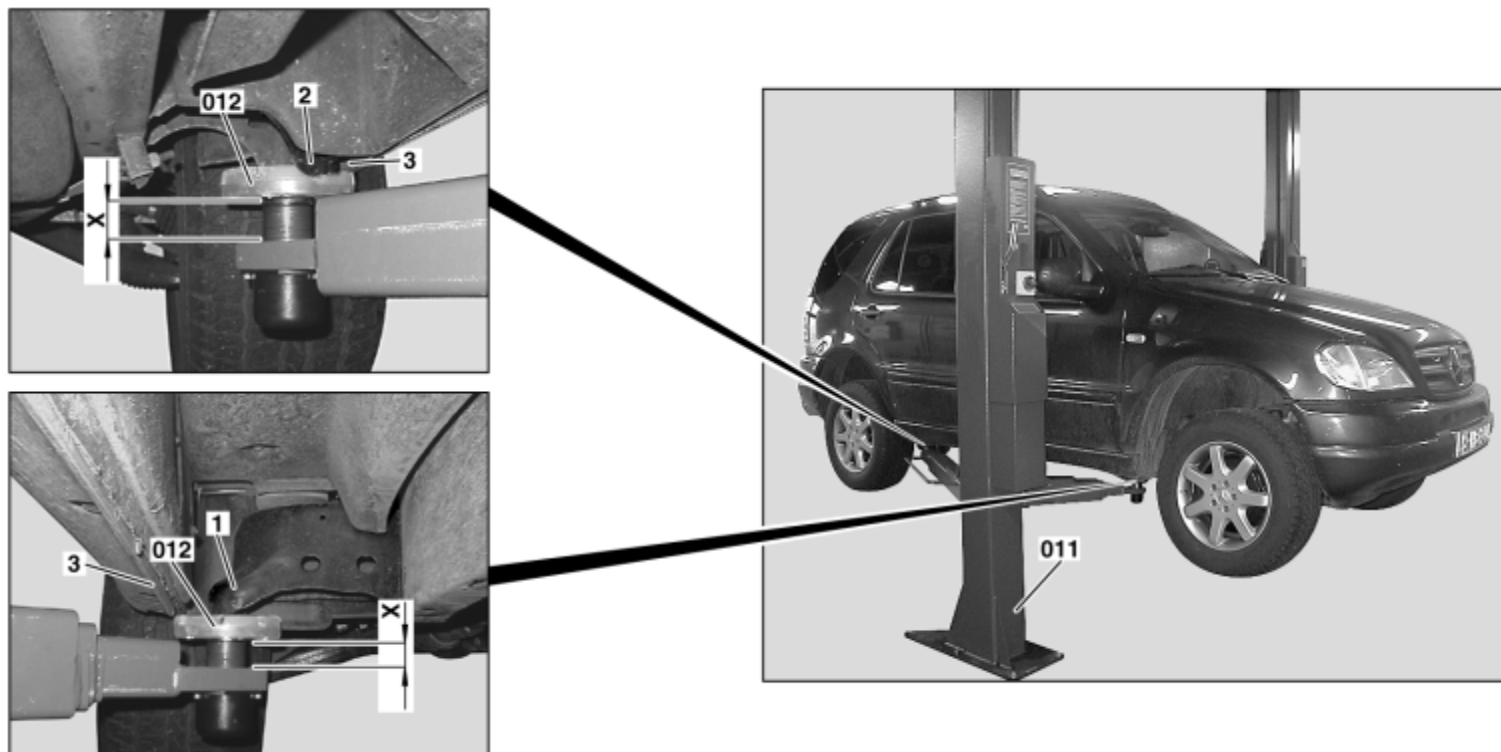



27.1.00

## MODEL 163



P00.60-2013-09

Fig. item, etc.	Work instructions		
 <b>Danger!</b>	<b>Lethal injuries</b> are possible if vehicle slips off of lifting platform	Align vehicle between the four lifting platform pillars and position the four support plates at the hoist mounting points specified by the vehicle manufacturer.	<a href="#">AS00.00-Z-0010-01A</a>

 <b>Danger!</b>	<b>Danger of accident</b> through self-acting movement of the vehicle when jacked up <b>Risk of injury</b> through intrusion into engine compartment or driveline where rotating parts pose a serious hazard.	Make sure that the jack stands are securely positioned. Authorized person should occupy driver's seat. Wear closed and close-fitting work clothes. Do not grasp hot or rotating parts.	<a href="#">AS00.00-Z-0008-01A</a>
	If the support plates are not properly mounted (012) at the vehicle's designated jacking points (1,2) damage may occur to the side sill covers (3).		
	The vehicle should be secured against tipping or falling off the platform when removing any units.		
	Lifting vehicle with inspection pit lift or garage jack		<a href="#">AR00.60-P-1000-01GH</a>
		Inspection pit lift.	<a href="#">WE58.40-Z-1002-05A</a>
1	Forward jacking points		
2	Rear jacking points		
3	Side sill covers		
011	Lifting platform		<a href="#">WE58.40-Z-1001-05A</a>
012	Support plates	All four support plates must be extended to an equal distance (Dimension X).	

**Workshop equipment/MB testers** (see Workshop Equipment Manual)

WE58.40-Z-1001-05A	Two-column lift
WE58.40-Z-1002-05A	Inspection pit lift