


AR42.20-P-0520-01A	Preloading automatic slack adjuster		
--------------------	-------------------------------------	--	--

1 Turn locking eccentric pin (g) counter-clockwise (approx. ½ turn) using Allen wrench and at the same time push it back in the longitudinal slot until the spring-loaded locking eccentric (b) locks into position in the spring clip (d) with elevation (h)

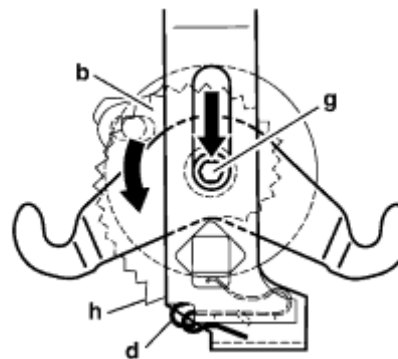

P42.20-0209-01