


**Model 164**

- 1 *Front brake pad contact sensor electrical connection*
- 2 *Front brake pad contact sensor*
- 3 *Right rear brake pad contact sensor*
- 4 *Right rear brake pad contact sensor electrical connection*

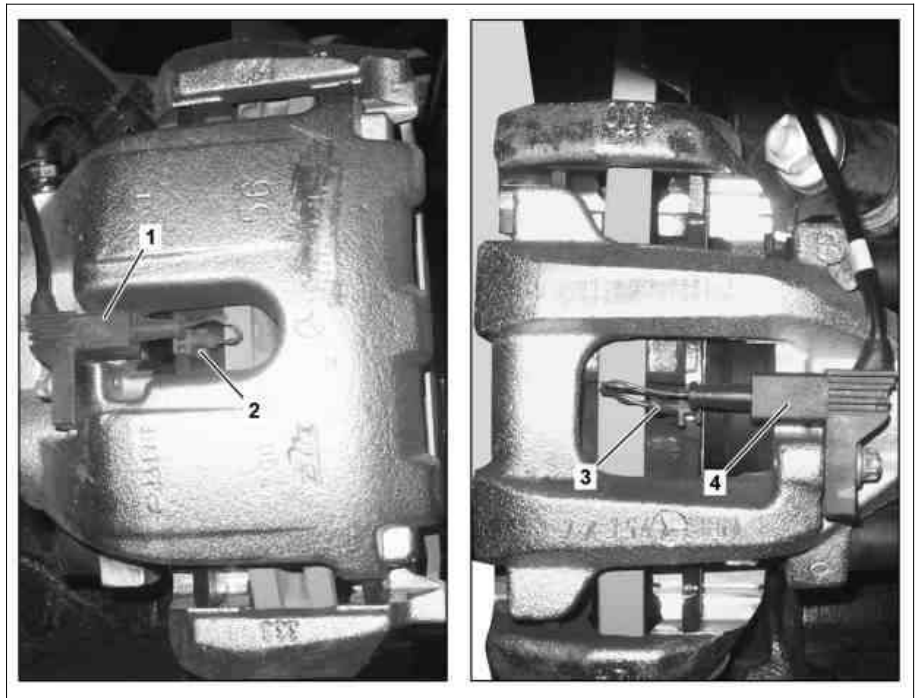

P42.10-3134-06

- When replacing the brake pads, the front brake pad contact sensor (2) and the rear brake pad contact sensor (3) must also be replaced.
  - The front brake pad contact sensor (2) and right rear brake pad contact sensor (3) may only be mounted to the inner brake linings.
  - The electrical feed line of the contact sensors must be routed as shown in the picture.
  - Check for correct locking of the left front brake pad contact sensor electrical connection (1) and right rear brake pad contact sensor electrical connection (4).
- i Ingressing moisture can result in the warning lamp lighting up.