



Model 164, 166, 292

Shown on model 164

- 1 Nuts
- 2 Accelerator pedal
- 3 Lug
- 4 Electrical connection

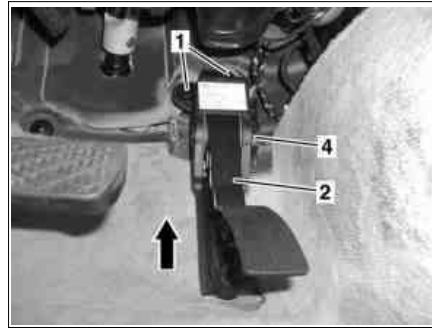

P30.12-2012-01

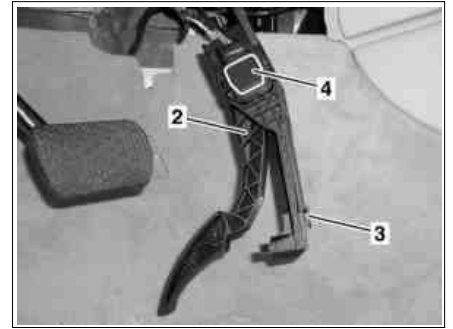

P30.12-2013-01

⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
🔧 🔩	Remove/install		
1	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove cover under the instrument panel on the driver-side	Model 166, 292 Model 164	AR68.10-P-1500GQ AR68.10-P-1500GZ
3	Unscrew nuts (1)		
4	Pull out the accelerator pedal (2) in the upper part slightly and then push upwards in order to loosen the lug (3)		
5	Remove accelerator pedal (2)		
6	Disconnect electrical connection (4)		
7	Install in the reverse order		