


Model 164

- 1 Front brake pad contact sensor electrical connection
- 2 Front brake pad contact sensor
- 3 Right rear brake pad contact sensor
- 4 Right rear brake pad contact sensor electrical connection

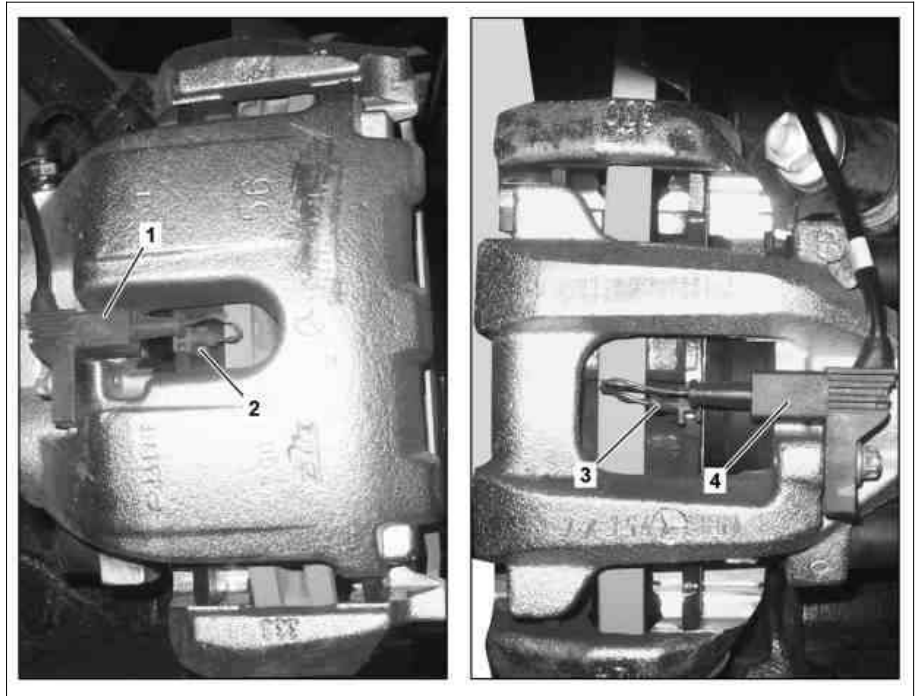

P42.10-3134-06

- When replacing the brake pads, the front brake pad contact sensor (2) and the rear brake pad contact sensor (3) must also be replaced.
- The front brake pad contact sensor (2) and right rear brake pad contact sensor (3) may only be mounted to the inner brake linings.
- The electrical feed line of the contact sensors must be routed as shown in the picture.
- Check for correct locking of the left front brake pad contact sensor electrical connection (1) and right rear brake pad contact sensor electrical connection (4).

i Ingressing moisture can result in the warning lamp lighting up.