


MODEL 211.0

- 1 C-pillar paneling
- 2 Edge guard
- 3 Belt end fitting
- 4 Clip
- 5 Seat belt
- 6 Sheet metal nut
- 7 Headliner

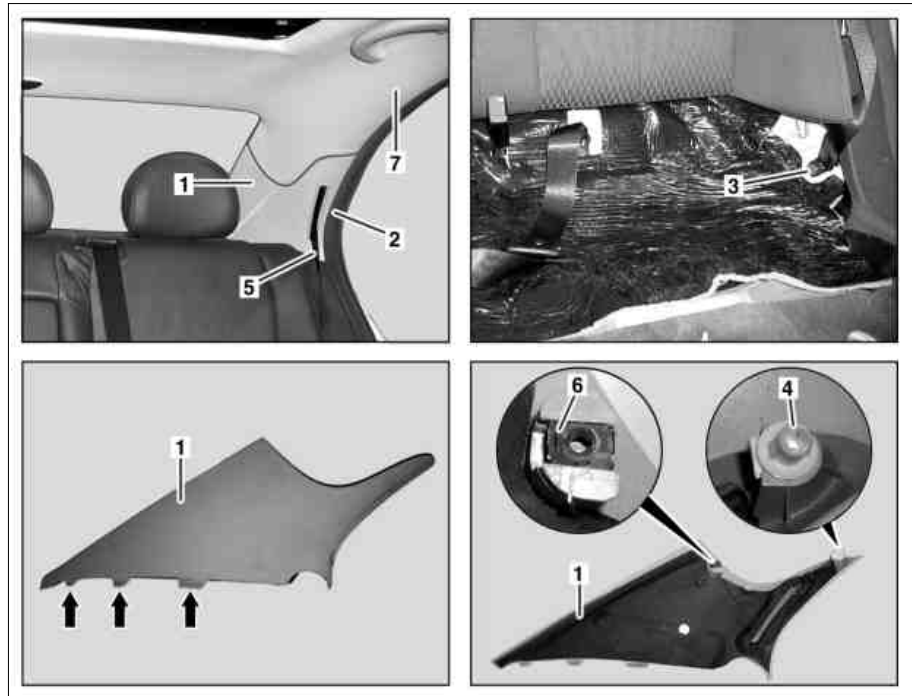

P68.30-2467-06

Modification notes

25.7.03	Work method changed	Operation steps 1.2, 11.1, 12.1,	
---------	---------------------	----------------------------------	--

	Removing		
1.1	Position both rear seat cushions upright	For vehicles with code (287a) Through-loading feature i See Operator's Manual	
1.2	Remove rear seat cushion	For vehicles without code (287a) Through-loading feature	AR91.12-P-1020T
2	Remove edge guard (2) in area of C-pillar paneling (1)		
3	Remove belt end fitting (3)		
4	Unclip C-pillar paneling (1) from clip (4)		
5	Pull C-pillar paneling (1) approx. 2 to 3 cm toward front, slightly pivot in direction of center of vehicle and remove from C-pillar toward front	i Thereby pull seat belt (5) through passage out of C-pillar paneling (1)	
	Install		
6	Insert sheet metal nut (6) into C-pillar paneling (1)	i Sheet metal nut (6) remains in C-pillar mount when C-pillar paneling (1) is removed	
7	Pull seat belt (5) through passage in C-pillar paneling (1)	i Do not twist seat belt (5).	
8	Insert C-pillar paneling (1) into rear shelf in guides (arrows)	i Thereby hold C-pillar paneling (1) pivoted slightly in direction of center of vehicle.	
9	Clip C-pillar paneling (1) to C-pillar.	i Observe transition to headliner (7).	
10	Install belt end fitting (3)	i Do not install seat belt (5) when twisted Nm	*BA91.40-P-1012-01A
11.1	Install rear seat cushion	For vehicles without code (287a) Through-loading feature	AR91.12-P-1020T
11.2	Fold down both rear seat cushions and lock	For vehicles with code (287a) Through-loading feature i See Operator's Manual	

Nm Seat belts/emergency tensioning retractors

Number	Designation	Model 211.0

BA91.40-P-1012-01A	Bolt, belt end fitting to vehicle floor	Nm 32