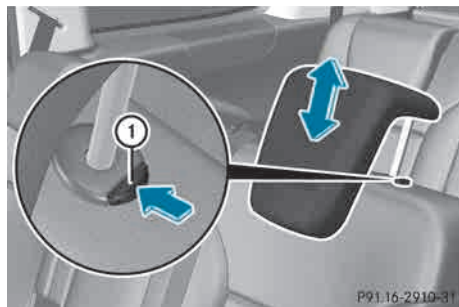Do not drive the vehicle without the seat head restraints installed when the rear seats are occupied. Head restraints are intended to help reduce injuries during an accident.

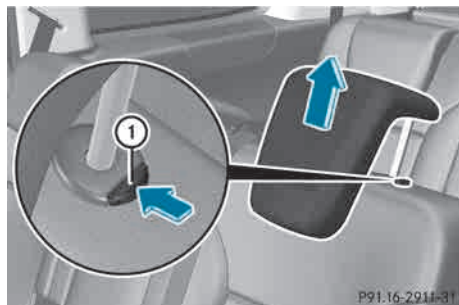### Adjusting the rear seat head restraint height

▶ Once the head restraint is fully lowered, press release catch ①.

▶ **To raise:** pull the head restraint up to the desired position.

▶ **To lower:** press release catch ① and push the head restraint down until it is in the desired position.

Removing and installing the rear seat head restraints

⚠ **WARNING**

Occupants should only travel sitting on seats which have the head restraints installed. This reduces the risk of injury to occupants in the event of an accident.

▶ **To remove:** pull the head restraint up to the stop.

▶ Press release catch ① and pull the head restraint out of the guides.

▶ **To re-install:** insert the head restraint so that the notches on the bar are on the left when viewed in the direction of travel.

▶ Push the head restraint down until you hear it engage in position.

Rear seats (2nd and 3rd row of seats)

Important safety notes

⚠ **WARNING**

If the seat and backrest are not engaged, they can fold forwards, e.g. in the event of sudden braking or an accident.

• This will cause the vehicle occupants to be forced into the seat belt by a seat or backrest which is not engaged. The seat belt can no longer offer the intended level of protection and can even cause injuries.

• A child restraint system would no longer be anchored or positioned correctly and would not be able to perform its required function.

• Objects or loads in the cargo compartment may not be restrained by the backrests.

There is an increased risk of injury.

Always make sure that the seat and backrest are engaged as described:

• before traveling with a passenger on a seat with the EASY-ENTRY/EXIT feature

• after you have adjusted the seat

• after the EASY-ENTRY/EXIT feature has been used

• after the cargo compartment enlargement has been folded forwards