



MODEL 203

Shown on model 203.0

- 1 Edge guard
- 2 A-pillar paneling

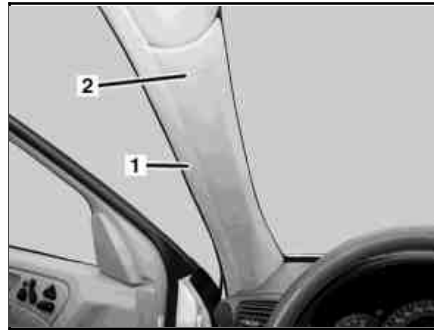


P68.30-2198-01

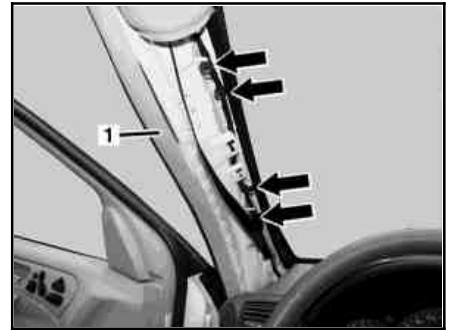

P68.30-2188-01

	Remove/install		
	Note on function reliability of windowbag		AH91.60-P-0693-01A
1	Remove edge protection (1) in area of A-pillar paneling		
2	Press off A-pillar paneling (2)	Move assembly wedge directly to each clip (arrows) and press off. Mounting wedge	*110589035900
3	Remove A-pillar paneling (2) out of instrument panel guide upward		
4	Install in the reverse order		

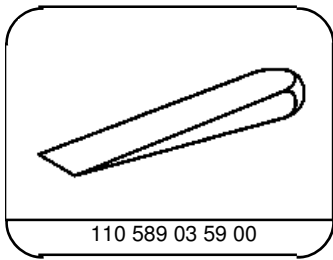

110 589 03 59 00

Wedge tool