


- ENGINE 271.940 in MODEL 203.042 /242 /742, 209.342 /442
- ENGINE 271.941 in MODEL 211.042 /242
- ENGINE 271.946 in MODEL 203.046 /246 /746
- ENGINE 271.948 in MODEL 203.040 /240 /740
- ENGINE 271.942 in MODEL 209.343, 203.043 /243 /743
- ENGINE 271.921 in MODEL 203.730
- ENGINE 271.955 in MODEL 209.341 /441
- ENGINE 271.956 in MODEL 211.041 /241

6 Intake air duct



P09.41-2357-01

- 1 Hose
- 2 Charge air hose
- 3 Connection piece to pressure damper
- 4 Bolts
- 5 Wide band silencer

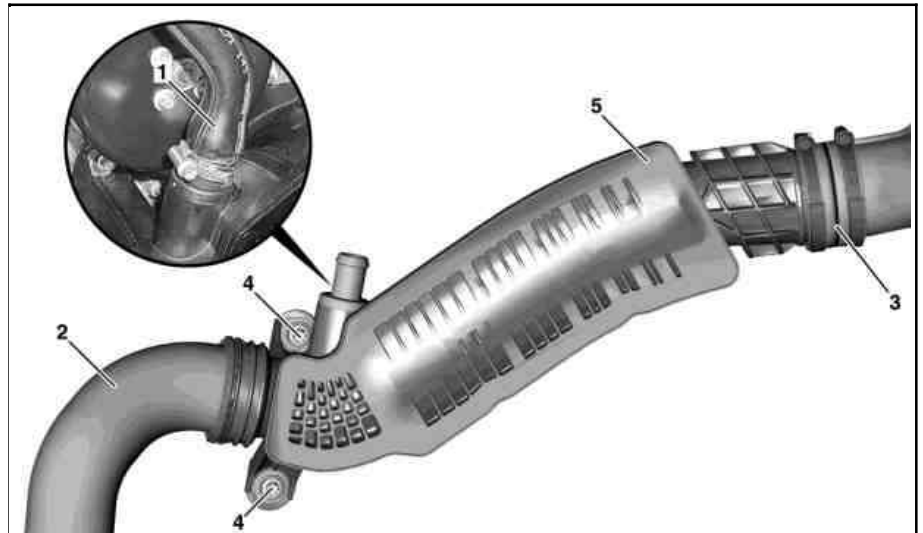

P09.41-2156-05

		Remove/install		
1		Open engine hood	Model 203 Model 209 Model 211	AR88.40-P-1000P AR88.40-P-1000Q AR88.40-P-1000T
2		Remove intake air duct (6)		
3		Slacken hose clamp from hose (1)		
4		Detach hose (1) from wideband silencer (5)		
5		Slacken charge air hose (2) at wide band silencer (5)		
6		Slacken hose clamp at connection piece (3) to pressure damper	Installation: Check hose clamp on connection piece (3) to pressure damper for damage, replace if necessary.	
7		Remove bolts (4)		*BA09.41-P-1003-02A
8		Remove wide band silencer (5)		
9		Install in the reverse order		

Charge air duct

Number	Designation		Engine 271
BA09.41-P-1003-02A	Bolt, wide band silencer to timing case cover	Nm	14