

Tools:

- Flat head screwdriver
- T-20 Torx screwdriver

Part:

- 2 Resistor Wiring Harness (Part no: A203 440 72 07)




Procedure:



Pop the trunk and remove these two screws with T-20 screwdriver.



Use flat head screwdriver to remove all these plastic clips.

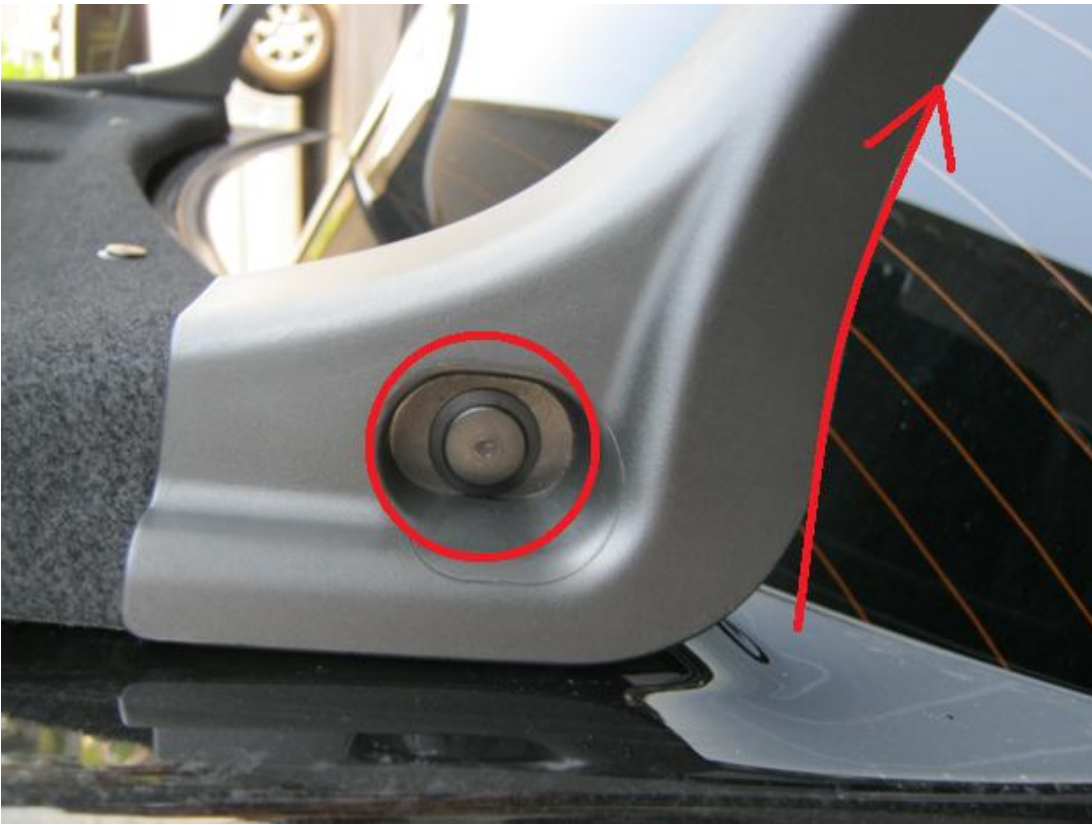


Also remove clips on each side of the arm cover and slide it down.



Now you can remove the trunk liner.



Disconnect these two license plate lamp connectors.

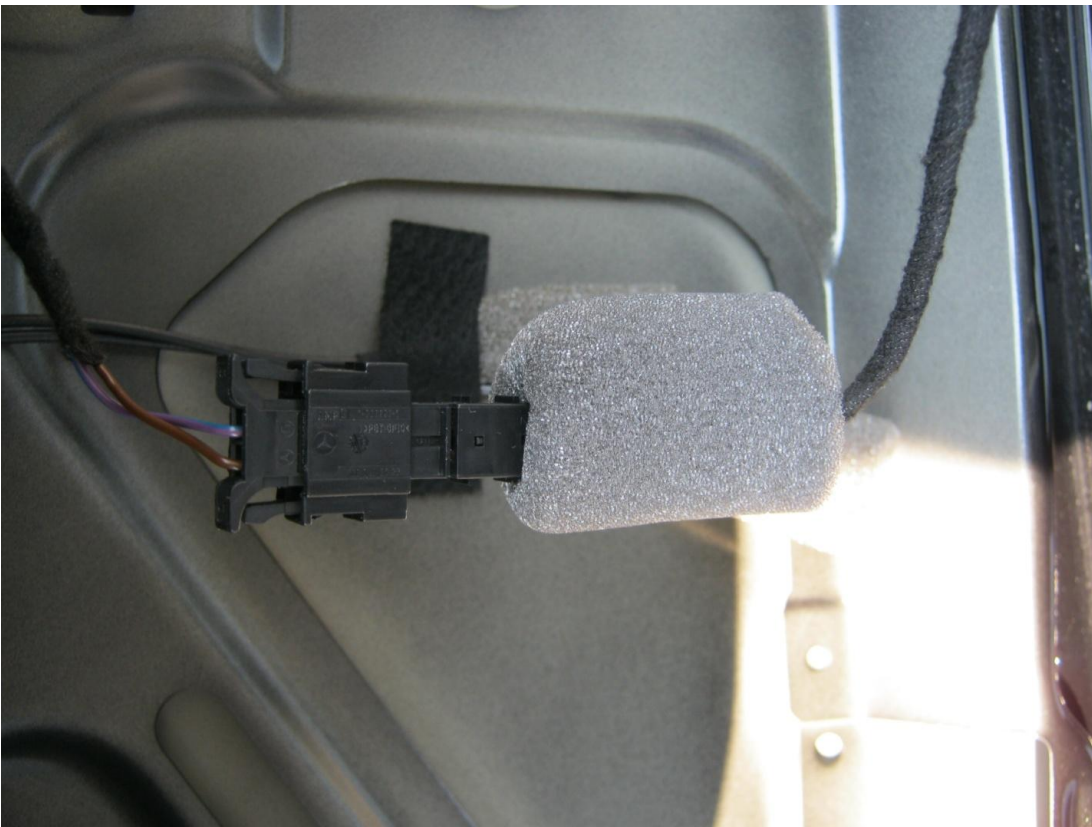

Plug the resistor in.



Fold the foam cover back.



Do the same on both sides...throw the liner back on and you're done!