





103 589 01 39 00


Cocking bolt

- 1 Hammer rivet nuts with a suitable bolt (arrow) out of exhaust manifold bores.
 Only screw bolt into rivet nut by hand.

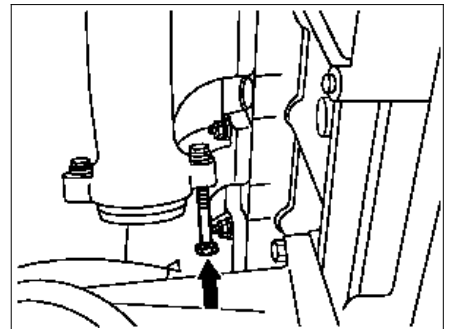

P49.10-0209-01

- 2 Insert new rivet bushes into exhaust manifold bore.
- 3  Screw cocking bolt into rivet nut and tighten.
- 4  Unscrew cocking bolt.

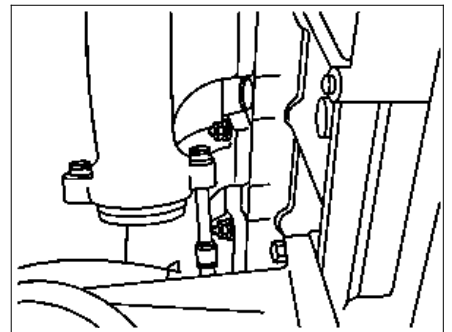

P49.10-0210-01