

P88.20-2939-09


**Illustrated on right side of vehicle.**

- 5 Air ducting
- 6 Bolt
- 7 Fender liner
- 8 Front fender
- 9 Bumper

- 10 Bolts
- 11 Electrical connector
- 12 Bracket
- 13 Bolt
- 14 Guide pin

- E1 Left front headlamp unit
- E2 Right front headlamp unit
- E5/1 Left fog lamp
- E5/2 Right fog lamp
- X26/27 Front bumper PARKTRONIC electrical connector (with code (220) Parktronic system (PTS))

	Remove/install		
<b>⚠ Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	<b>AS00.00-Z-0010-01A</b>
1	Lift vehicle on lifting platform.		
2	Remove radiator trim		<b>AR88.40-P-4001CW</b>
3	Pivot left and right air ducting (5) to side and unscrew bolt (6).		
4	Loosen left and right fender liner (7) in area of bumper (9) and lift out with assembly wedge.		<b>*110589035900</b>
5	Remove bolts (10)		
6	Disconnect front bumper PARKTRONIC electrical connector (X26/27)	On vehicles with code (220) Parktronic system (PTS)	
7	Disconnect electrical connector (11) on left front fog lamp (E5/1) and right front fog lamp (E5/2)		
8	Unscrew bolt (13) on left and right bracket (12).		
9	Pivot left and right bracket (12) toward outside and press bumper (9) forward and remove.		
10	Install in the reverse order		
11	Check adjustment of left front fog lamp (E5/1) and right front fog lamp (E5/2); correct if necessary. Check and correct headlamp adjustment		<b>AP82.10-P-8260CW</b>

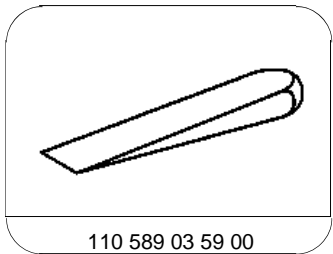

110 589 03 59 00

Assembly wedge