


## Routing diagram

- 1 Illuminated Mercedes star
- 1.1 Black 2-pin coupling
- 2 Wiring harness for illumination Mercedes star
- 2.3 Black 18-pin coupling
- 2.4 Black connector housing
- 3 Control unit
- br Brown line
- br/rt Brown/red line
- rt Red line
- sw Black line
- sw<sub>1</sub> Black line tieout
- ws White line tieout
- N10/1 Front SAM control unit with fuse and relay module
- W15/5 Left front footwell ground point
- W15/6 Ground point (left front footwell CAN)
- X30/32 Left vehicle floor interior CAN voltage distributor electrical connector

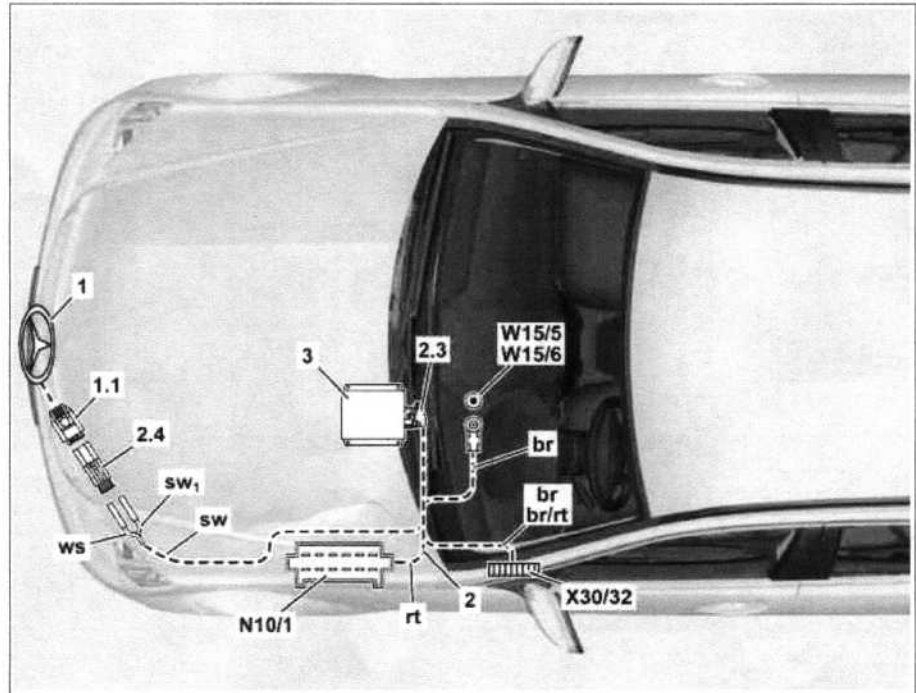

P88.40-3030-06

**i** The following work procedure is shown on MODEL 204.


- 1 Glue felt strip (8) to front of control unit (3).

**i** The bonding surfaces must be free of dust and grease.

- 2 Glue velcro strip (9) to rear of control unit (3).

**i** The bonding surfaces must be free of dust and grease.

- 3 Remove carrier foil from velcro strip (9).

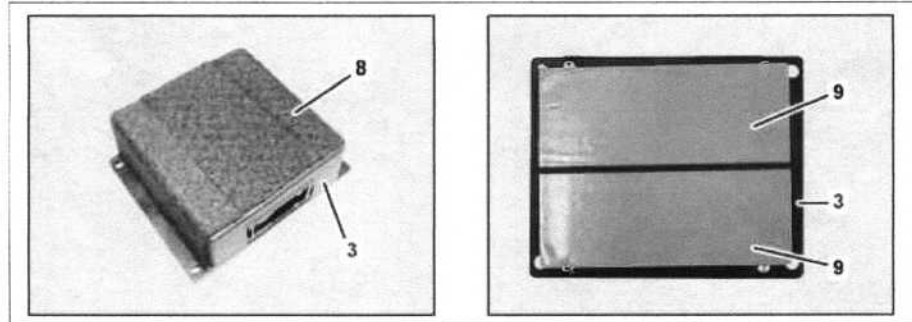

P88.40-3035-04