


4 Connect black, 18-pin coupling (2.3) on wiring harness for illuminated Mercedes star to control unit (3) and lock.

5 Clean contact surface of control unit (3) in vehicle.

i The bonding surfaces must be free of dust and grease.

6 Glue control unit (3) in driver side footwell to splash wall.

7 Route brown line (BN) from control unit (3) to rear seat crossmember ground point (W15/6) and fix in place using cable ties.

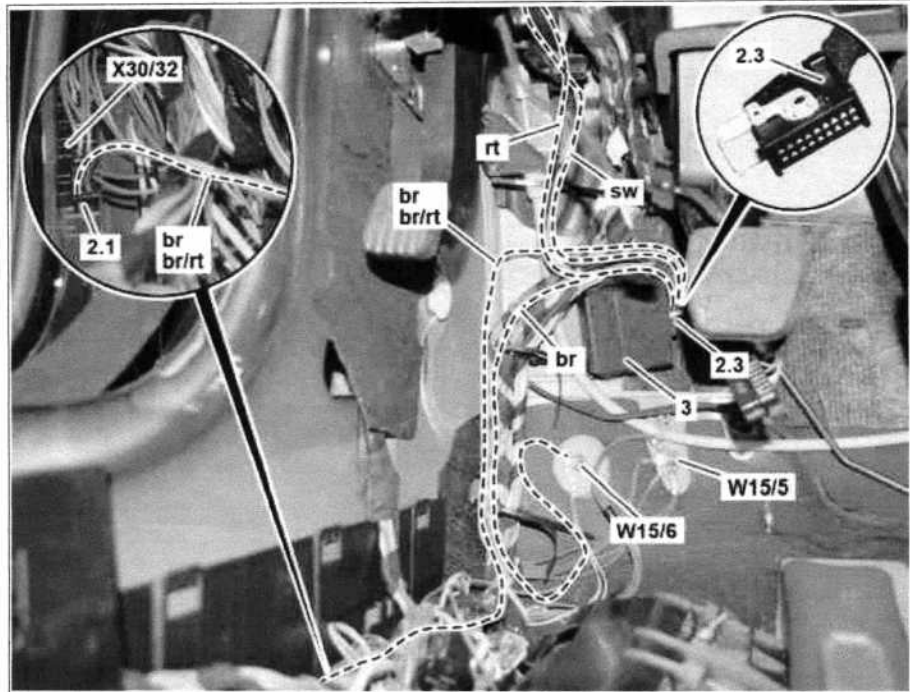


P88.40-3031-06

8 Connect brown line (br) of Mercedes star illuminated wiring harness at left front footwell ground point CAN (W15/6).

i A maximum of 5 ground connections can be connected, otherwise the left front footwell ground point (W15/5) is to be used as an alternative.

9 Route twisted brown line (br) and brown/red line (br/rt) on wiring harness for illuminated Mercedes star from control unit (3) to left vehicle floor interior CAN potential distributor (CAN) electrical connector (X30/32) and fix in place using cable ties.

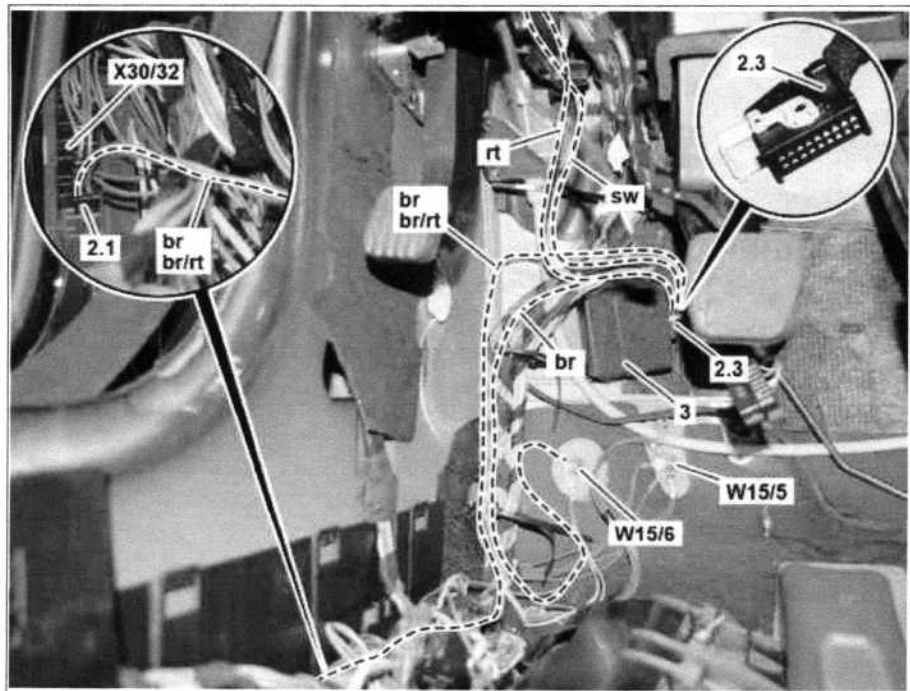

P88.40-3031-06