


- 19 Remove cable grommet (10) from housing on front SAM control unit with fuse and relay module (N10/1).

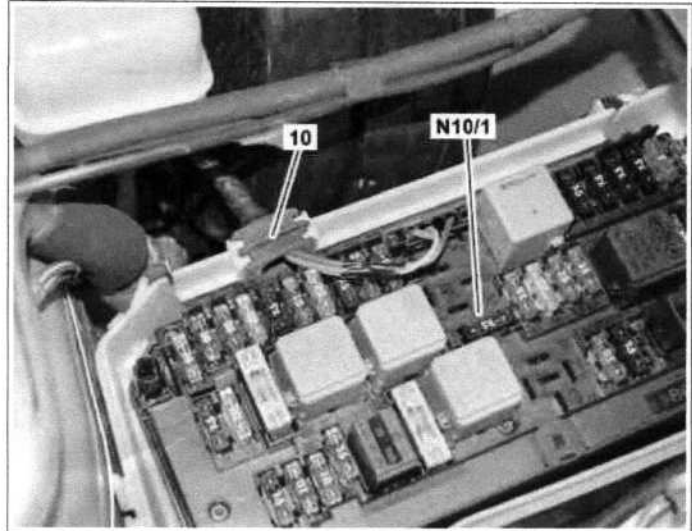

P88.40-3045-11


- 20 Route black line (sw) from front SAM control unit with fuse and relay module (N10/1) along present lines to installation location of illuminated Mercedes star and fix in place with cable ties.

- 21 Install black line (sw) into black connector housing (2.4).

i Contact cavity assignment:

- Chamber 1 = white line tieout (ws)
- Chamber 2 = black line tieout (sw₁)

The black line (sw) is connected to the black 2-pin connector on the illuminated Mercedes star later.

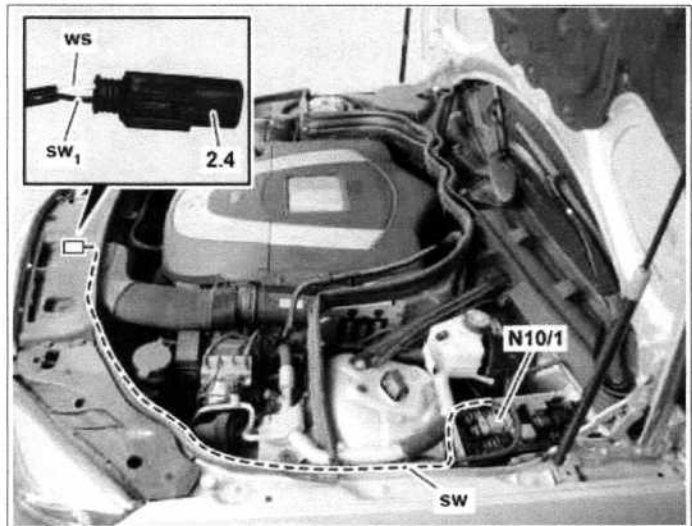

P88.40-3046-11