



Mercedes-Benz
The best or nothing.

star bulletin



Date: April 2014
Order No.: P-B-88.40/92a
Supersedes P-B-88.40/92
Group: 88

Revision a: Included models: 204.3/9

**SUBJECT: Models 204.0/3/9
Permanently Illuminated Star Installation Instructions**

Note: These US specific instructions are for the star to be illuminated when the ignition is switched on.

 **A. Remove Front SAM**

1. Place a piece of tape on the water deflector to prevent damage (Figure 1).
2. Remove cover from front SAM
3. Remove the four screws in the front SAM.

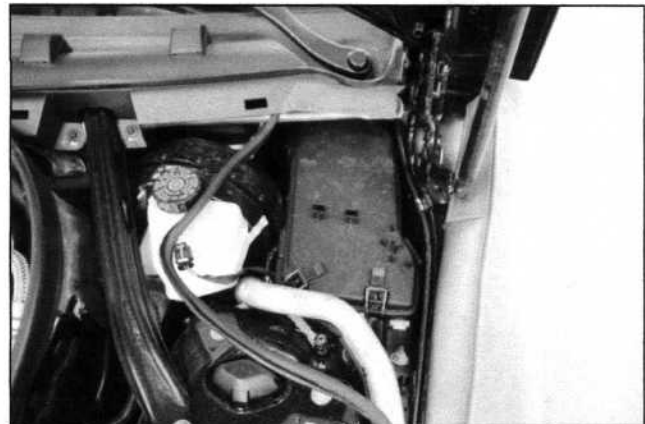


Figure 1

This bulletin has been created and maintained in accordance with MBUSA-SLP S423QH001, Document and Data Control, and MBUSA-SLP S424HH001, Control of Quality Records.

© 2014 Mercedes-Benz USA, LLC.
Mercedes-Benz Canada, Inc.
Dealer Workshop Services
www.MBUSA.com
www.startekinfo.com

All rights reserved. Reproduction or translation in whole or in part is not permitted without authorization from the publisher. Printed in U.S.A.
1-800-FOR-MERCEdes