

B. Install Illuminated Star

1. Remove connector 11C from front SAM.
(Figure 4).
2. Remove the wire in cavity 13 from 11C.
(Figure 4).

Note:

Wire color is: Pink / yellow.

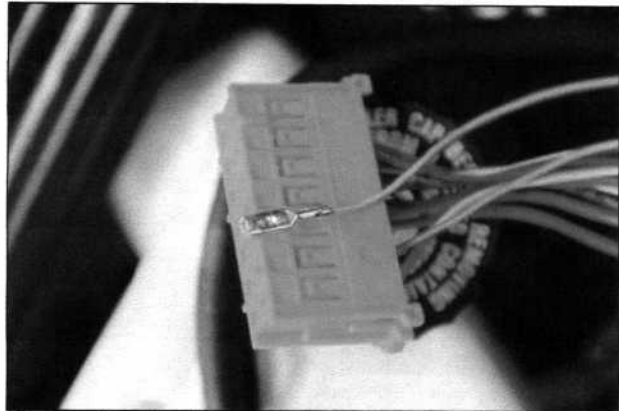


Figure 4

3. Plug in the wire (A, Figure 5) from 11C, pin 13 into the cavity of the 2 pin connector (arrow, Figure 5) that came with "Y" adapter harness (A207 820 02 04).

Note:

Ensure the wire from the vehicle is in the same cavity as yellow /red wire of the "Y" harness for the fuse.

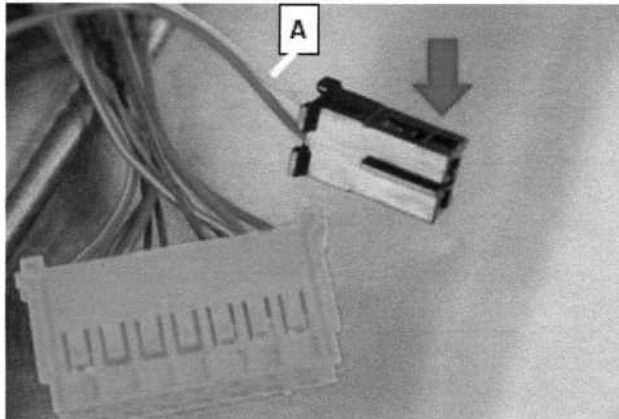


Figure 5

4. Plug the red wire (arrow, Figure 6) from the "Y" adapter harness into cavity 13 on connector 11C.
5. Plug the 11C connector back into the front SAM.
6. Connect Illuminated star wiring harness (A207 820 00 00) connector pin into 2 pin connector (A, Figure 6).
7. Connect harness (A, Figure 6) into "Y" adapter harness harness (B).

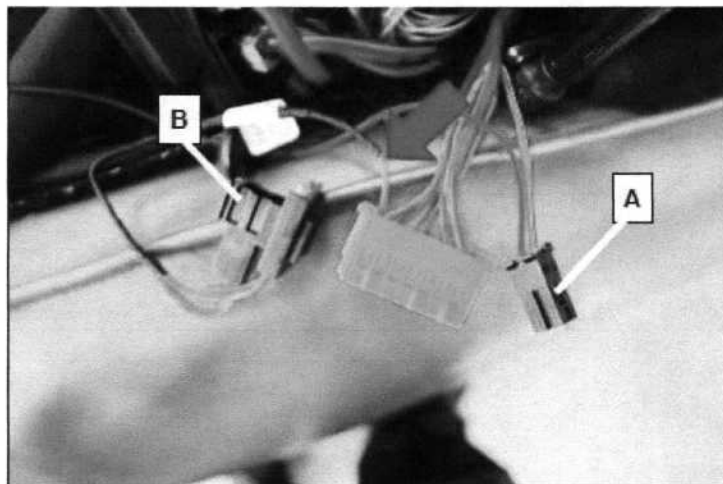


Figure 6