

8. Insert square rubber stopper (arrow, Figure 7) into the side wall of the SAM box.
9. Install SAM.

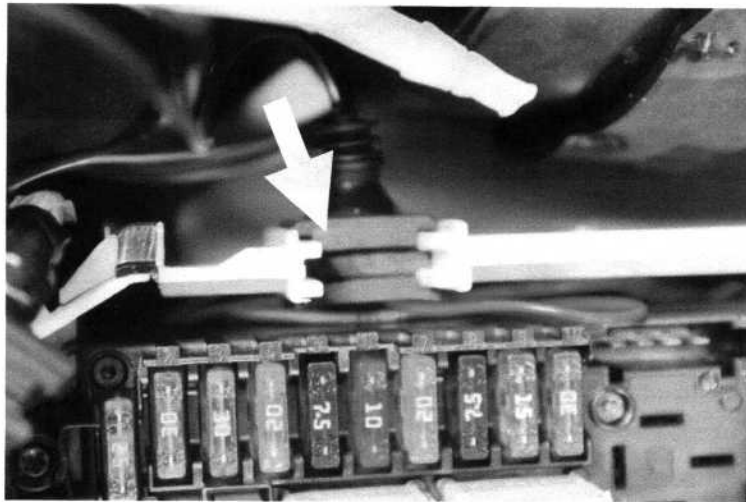


Figure 7

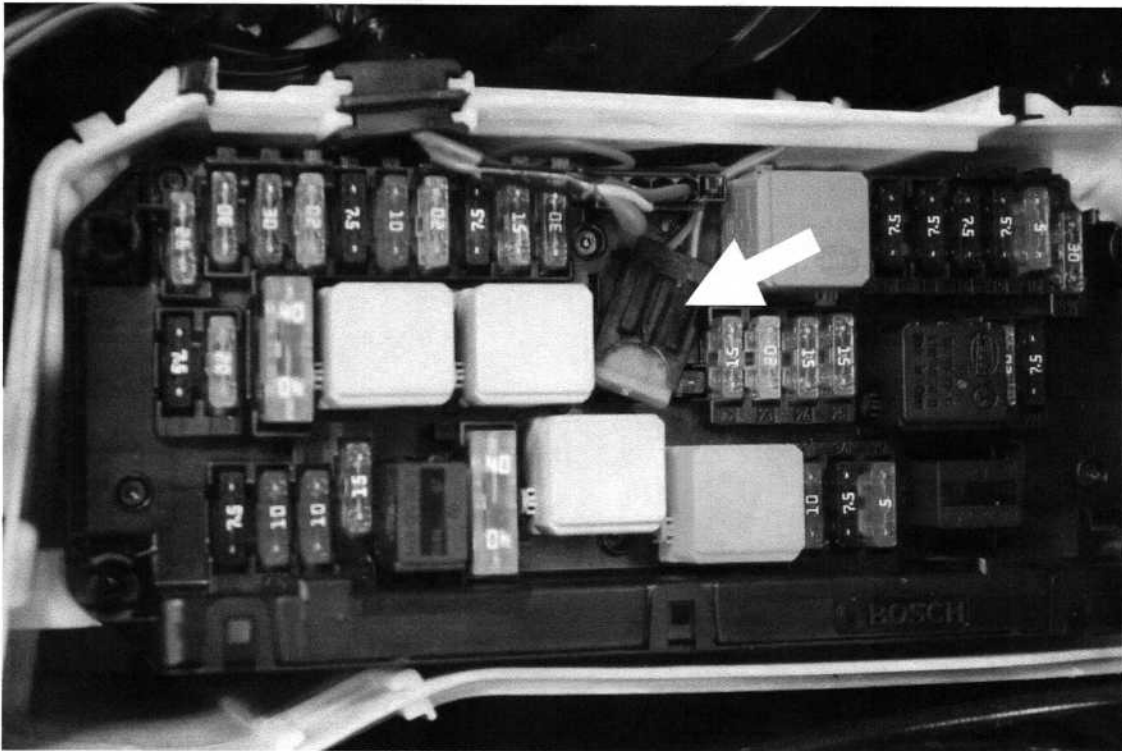


Figure 8

10. Fit the wire harness for the wiper motor on top of the rubber stopper for the illuminated star harness.
11. Position the fuse (arrow Figure 8) as shown for future access.
12. Install cover.