


P72.20-2766-09

Shown on model 204.2

- 1 Right trim piece
- 2 Left paneling
- 3 Mounting wedge
- 4 Center trim
- 5 Clamp
- 6 Clip
- 7 Rag
- 8 Rear-end door

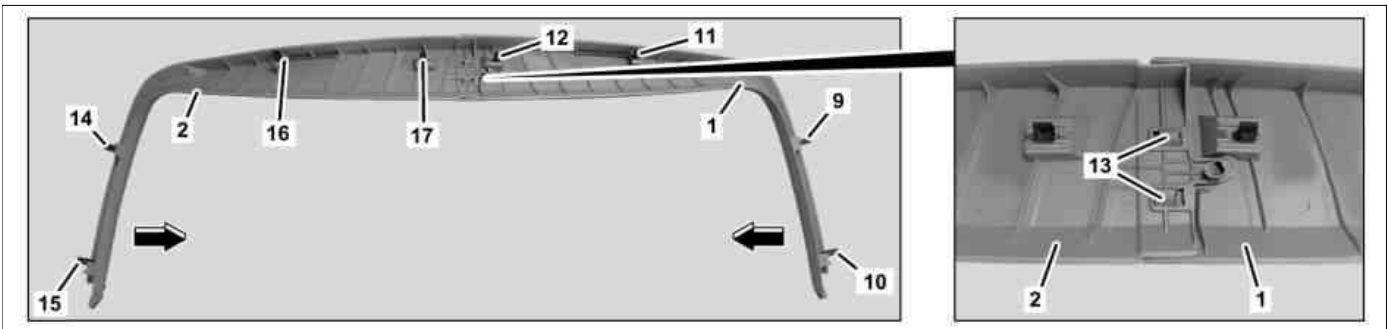













P72.20-2766-09

Shown on model 204.2

- 1 Right trim piece
- 2 Left paneling
- 9 Clamp
- 10 Clamp
- 11 Clamp
- 12 Clamp
- 13 Catch hook
- 14 Clamp
- 15 Clamp
- 16 Clamp
- 17 Clamp

	Remove/install		
1	Unclip center paneling (4) from rear-end door (8) with assembly wedge (3)	<ul style="list-style-type: none"> Lay rag (7) over assembly wedge (3) to prevent paint damage on rear-end door (8) Installation: Ensure that clips (6) are seated correctly in center paneling (4) 	*110589035900
2	Remove center paneling (4) from clips (5)	Model 204.2	
3	Unclip clamp (10) with right paneling (1) from window frame in direction of arrow	<ul style="list-style-type: none"> Always maintain sequence when unclipping right paneling (1) and left paneling (2). Otherwise the fasteners on the right paneling (1) or left paneling (2) can be damaged. 	*110589035900
4	Unclip clamp (9) with right paneling (1) from window frame in direction of arrow		*110589035900
5	Unclip clamp (11) with right paneling (1) from window frame in direction of arrow	<ul style="list-style-type: none"> Ensure that paint is not damaged when unclipping the clamp (11). 	

			*110589035900
6	Unclip clamp (12) with right paneling (1) from window frame in direction of arrow	 Ensure that paint is not damaged when unclipping the clamp (12). 	*110589035900
7	Unclip right paneling (1) on catch hooks (13) from left paneling (2) and remove		*110589035900
8	Unclip clamp (15) with left paneling (2) from window frame in direction of arrow		*110589035900
9	Unclip clamp (14) with left paneling (2) from window frame in direction of arrow		*110589035900
10	Unclip clamp (16) with left paneling (2) from window frame in direction of arrow	 Ensure that paint is not damaged when unclipping the clamp (16). 	*110589035900
11	Unclip clamp (17) with left paneling (2) from window frame in direction of arrow	 Ensure that paint is not damaged when unclipping the clamp (17). 	*110589035900
12	Install in the reverse order	 Installation: Always maintain sequence when clipping in right paneling (1) or left paneling (2). Otherwise the fasteners on the right paneling (1) or left paneling (2) can be damaged.	

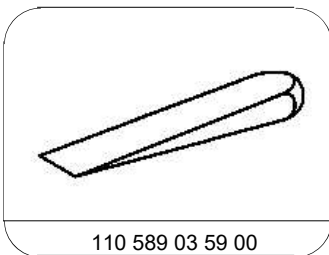

110 589 03 59 00

Mounting wedge