


AR68.20-P-2000LW	Remove/install center console	19.11.15
------------------	-------------------------------	----------

Model	205 with transmission 722, 724, 725
-------	-------------------------------------


P68.20-4710-09

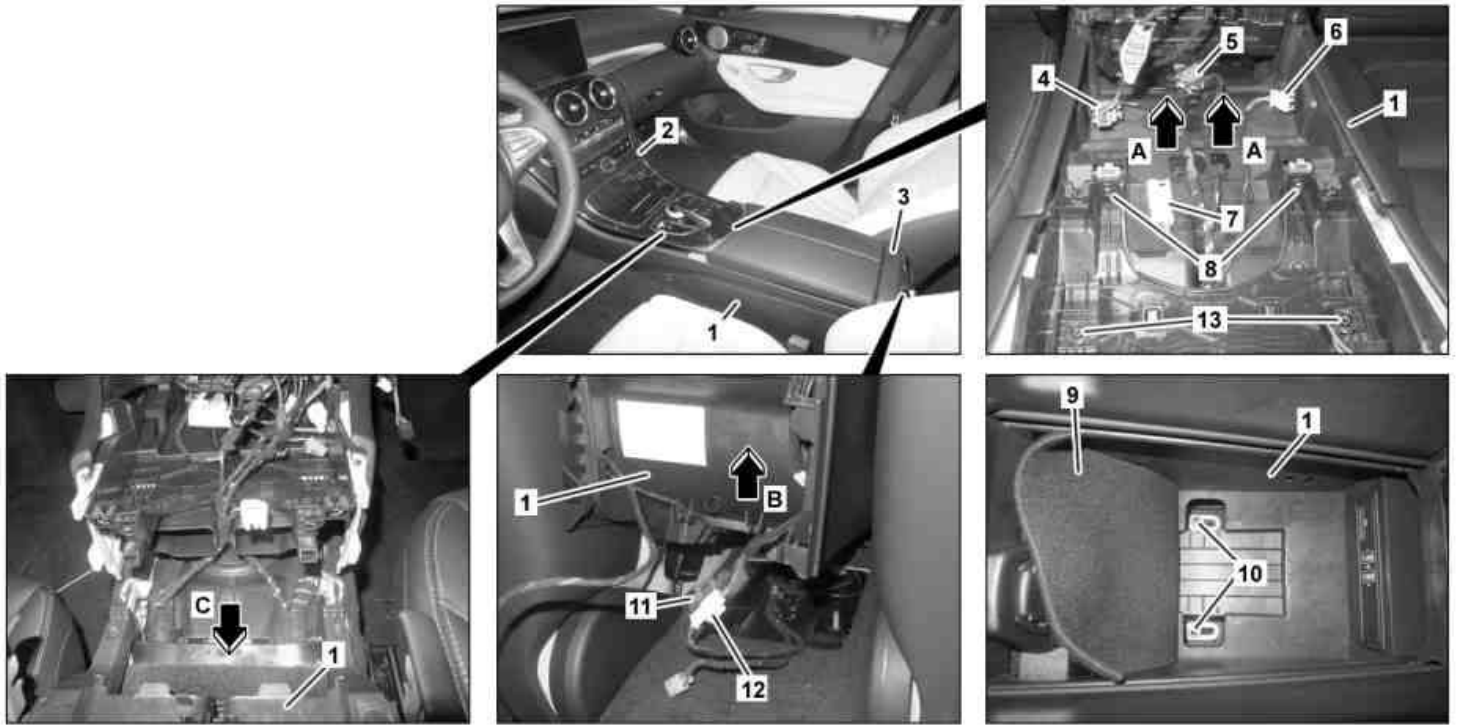

Shown on model 205.0 with code 386 (Comfort telephony)

1	Center console	8	Bolts
2	Center console cover	9	Cover
3	Rear center console cover	10	Nuts
4	Electrical connector	11	Electrical connector (with code 386 (Comfort telephony))
5	Electrical connector	12	Electrical connector (with code 386 (Comfort telephony))
6	Electrical female connector	13	Bolts
7	Electrical female connector		

Remove/install		
1	Remove center console cover (2)	■ Remove/install cover on center console
2	Remove rear center console covering (3)	■ Remove/install rear cover on center console
3	Disconnect electrical connector (4) and unclip from center console (1)	i The number can vary according to the equipment.
4	Disconnect electrical connection (5)	i The number can vary according to the equipment.
5	Unclip electrical sockets (6, 7) from center console (1)	i The number can vary according to the equipment.
6	Unclip wiring harness from center console (1) (arrows A)	
7	Lift paneling (9) in armrest stowage compartment and lay down to side	
8	Unscrew nuts (10)	
9	Remove screws (13)	
10	Remove bolt (8)	
11	Disconnect electrical connections (11, 12)	Model 205 with transmission 722, 724, 725 with code 386 (Comfort telephony)

12	Lift center console (1) at rear (arrow B) and move out of instrument panel (arrow C) toward rear	 Installation: Ensure that air duct is seated correctly on air conditioning housing.	
13	Install in the reverse order		