




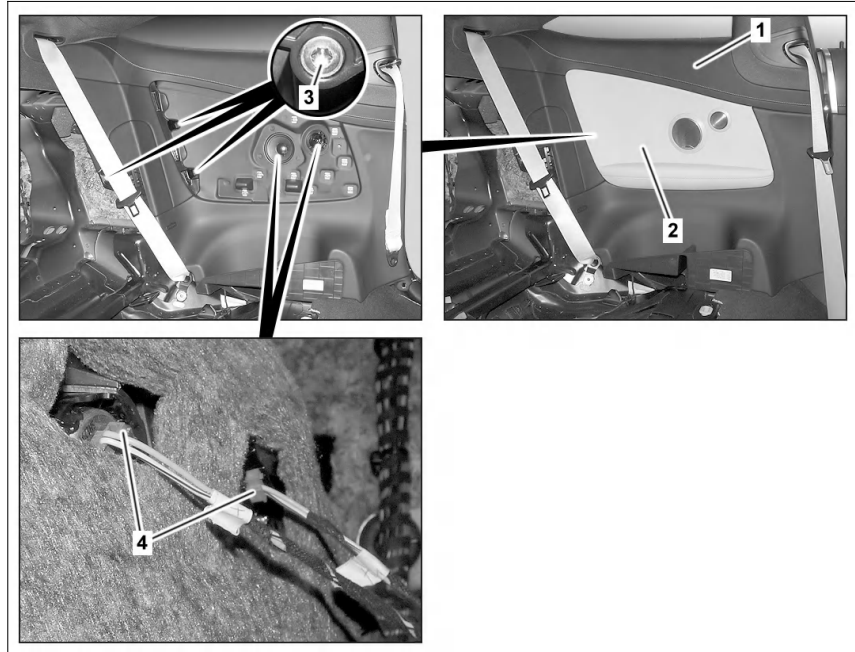

Model 205.3


Shown on left side of vehicle

- 1 Side paneling
- 2 Cover
- 3 Screw
- 4 Electrical connectors (with code 810 (Sound system))



P68.30-3862-06

 	Remove/install		
1	Remove door sill molding		AR68.30-P-4100CLW
2	Remove backrest in rear		AR91.12-P-1720LW
3	Remove side upholstery		AR91.12-P-1710LW
4	Unclip cover (2) and remove	 Mounting wedge	*110589035900
5	Remove bolts (3)		
6	Unclip side paneling (1) and remove	Model 205.3 except code 810 (Sound system)	
7	Loosen side paneling (1) until electrical connectors (4) are accessible	Model 205.3 with code 810 (Sound system)  Carefully loosen left and right side paneling (1). Otherwise the electrical connectors (4) can be damaged.	
8	Disconnect electrical connectors (4) and remove side paneling (1)	Model 205.3 with code 810 (Sound system)	
9	Install in the reverse order		

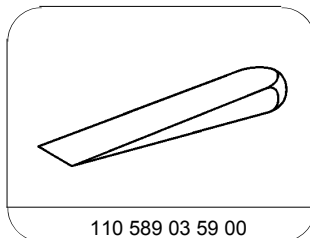

110 589 03 59 00

Mounting wedge