


Mercedes C63 / C43 AMG 205 installation images and assembly instructions

Flap control RX1 ME2-C

- **Car-specific cable**
- C63 / C43 W205 with performance exhaust system
- **Requirements are at least two exhaust valves in the muffler area**
- **Assembly time: maximum 5 minutes**

Method:

- Stop, stop the vehicle and open the trunk
- Remove bottom cover and underlying cover
- Plug for exhaust flaps locate (directly direction rear bumper)
- Disconnect connector (connector see Figure 1)
- between insert and flap control RX1 set unit in an appropriate location

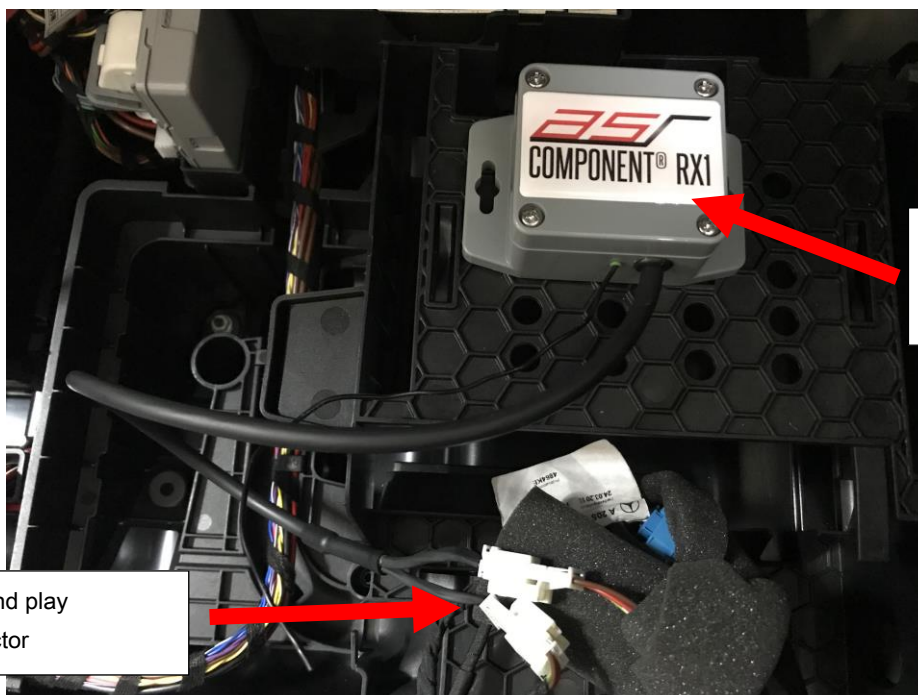

These instructions are only for orientation. The general information must always be observed and are each shipment at.