



DIY For Coding Out ABC on R230 Cars :


- To do this, you need a Star with Developer mode. Hook up SDS to your car and when it reads your car, select Control Units, pick Information and Communication and you will see ICM :

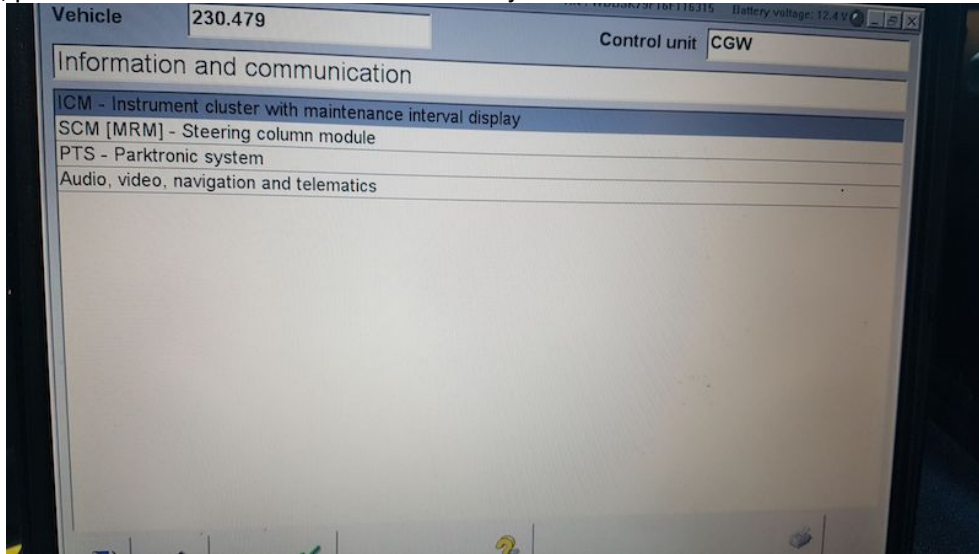


- After ICM, you will see Control Unit Adaptions :

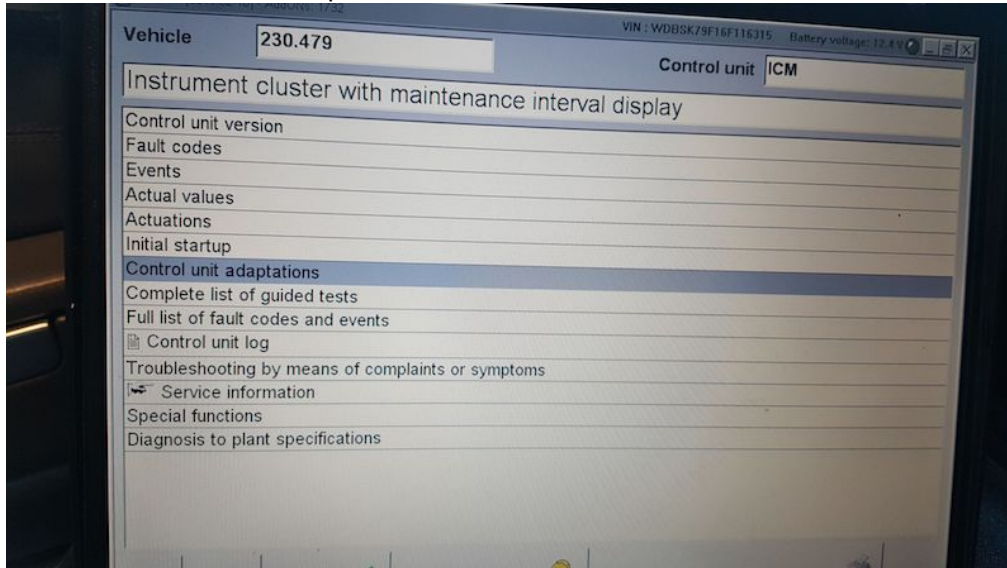


- From there, pick the year of your model :

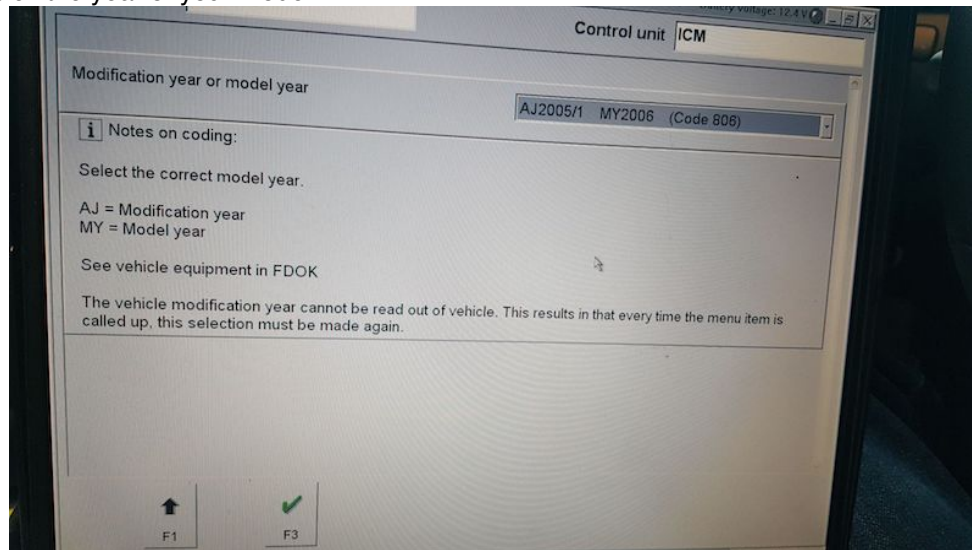

- From there, pick Special Equipment :

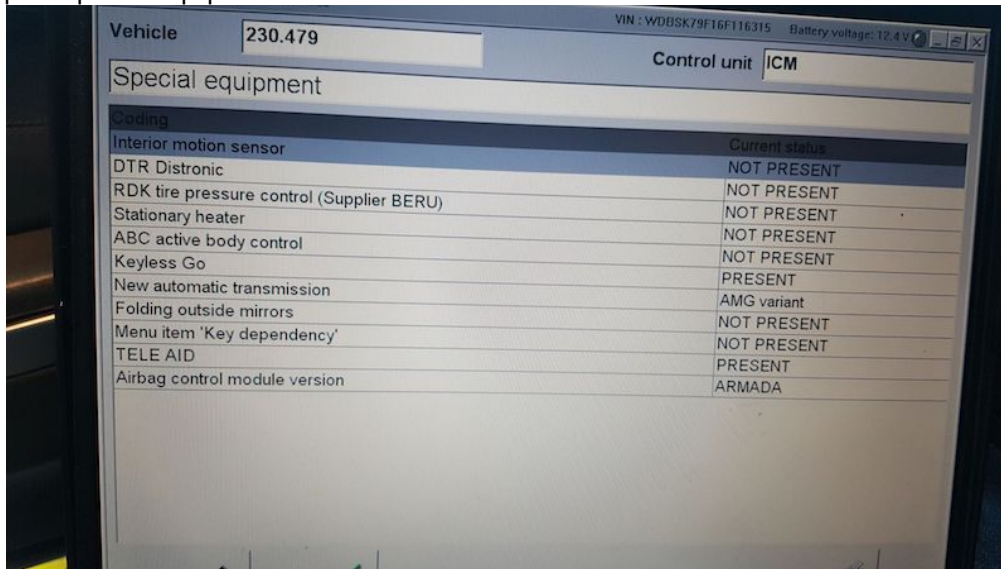

- Pick ABC :

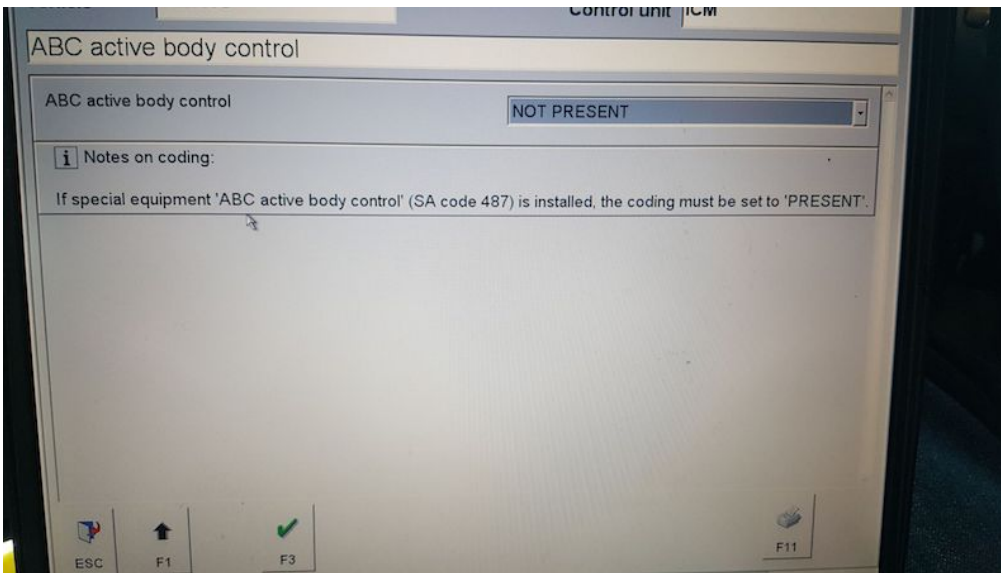

- Then go to the drop down tab and change it from PRESENT to NOT PRESENT, and click F3.
- After that, turn off the car, with the doors closed.
- Wait 1-2 mins and start the car back up (no more ABC codes and no white or red lights).

NOTE : *the above is is only for R230s (not any W215, W216, W220, W221)*