MODEL 215, 220 with CODE (308) Cooling compartment in center rear backrest


Shown on model 220.875

1 Knurled screw

2 Carrier plate for audio components

3 Star handle screws

A39/1 Rear armrest refrigerator

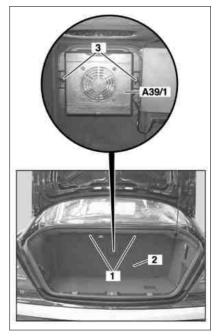

P86.61-2036-03

XX	Remove/Install		
1.1	Unscrew knurled head screw (1) and swing down carrier plate for audio components (2)	Model 220.875/878 with Audio system (High End) code P005.	
		Pull knurled head screws (1) out of carrier plate for audio components (2) before swinging down to avoid damaging the floor covering	
2	Disconnect electrical connector		
3	Unscrew star handle screws (3).		
4	Pull refrigerator box backrest (A39/1) out of refrigerator mount		
5	Install in the reverse order		