


MODEL 216.3, 221.0 /1

Illustrated on model 221

- 1 Cover
- 2 Bolt
- 3 Engine hood release lever
- 4 Bolts
- 5 Expansion clip
- 6 CAN distributor bracket

E17/16 Left front footwell lamp

X11/4 Data link connector

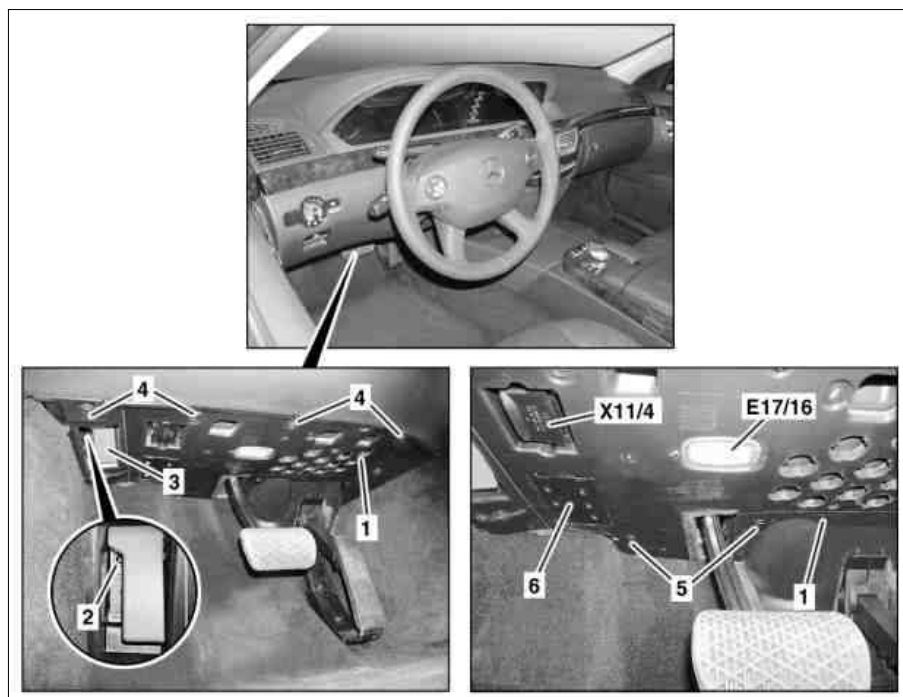

P68.10-3473-06

↕ ↘	Remove/install		
1	Move driver seat to end position toward rear		
2	Release engine hood release lever (3) and guide toward inside through cover (1).		
3	Remove bolts (4)		
4	Unclip expansion clips (5)		
5	Lower cover (1) and disconnect electrical connector from left front footwell lamp (E17/16)		
6	Release data link connector (X11/4) and remove from cover (1)		
7	Unclip CAN distributor bracket (6) and guide toward inside through cover (1)		
8	Remove cover (1) out of the footwell		
9.1	Unclip CAN distributor bracket (6) from new cover (1)	When replacing cover (1).	
10	Install in the reverse order		