


Display Document

Sales designation:	Vehicle ident. number:	Engine number:	Automatic transmission:	Gr.:	Entry:	Mod.Y.:	Op. no.:
CLK 320	WDB209365*	112.955	722618	67			

AR68.30-P-4780Q	Remove/install side paneling in rear	Full-size view	Validity OFF	Page:	2 / 7
-----------------	--------------------------------------	----------------	--------------	-------	-------

MODEL 209.3

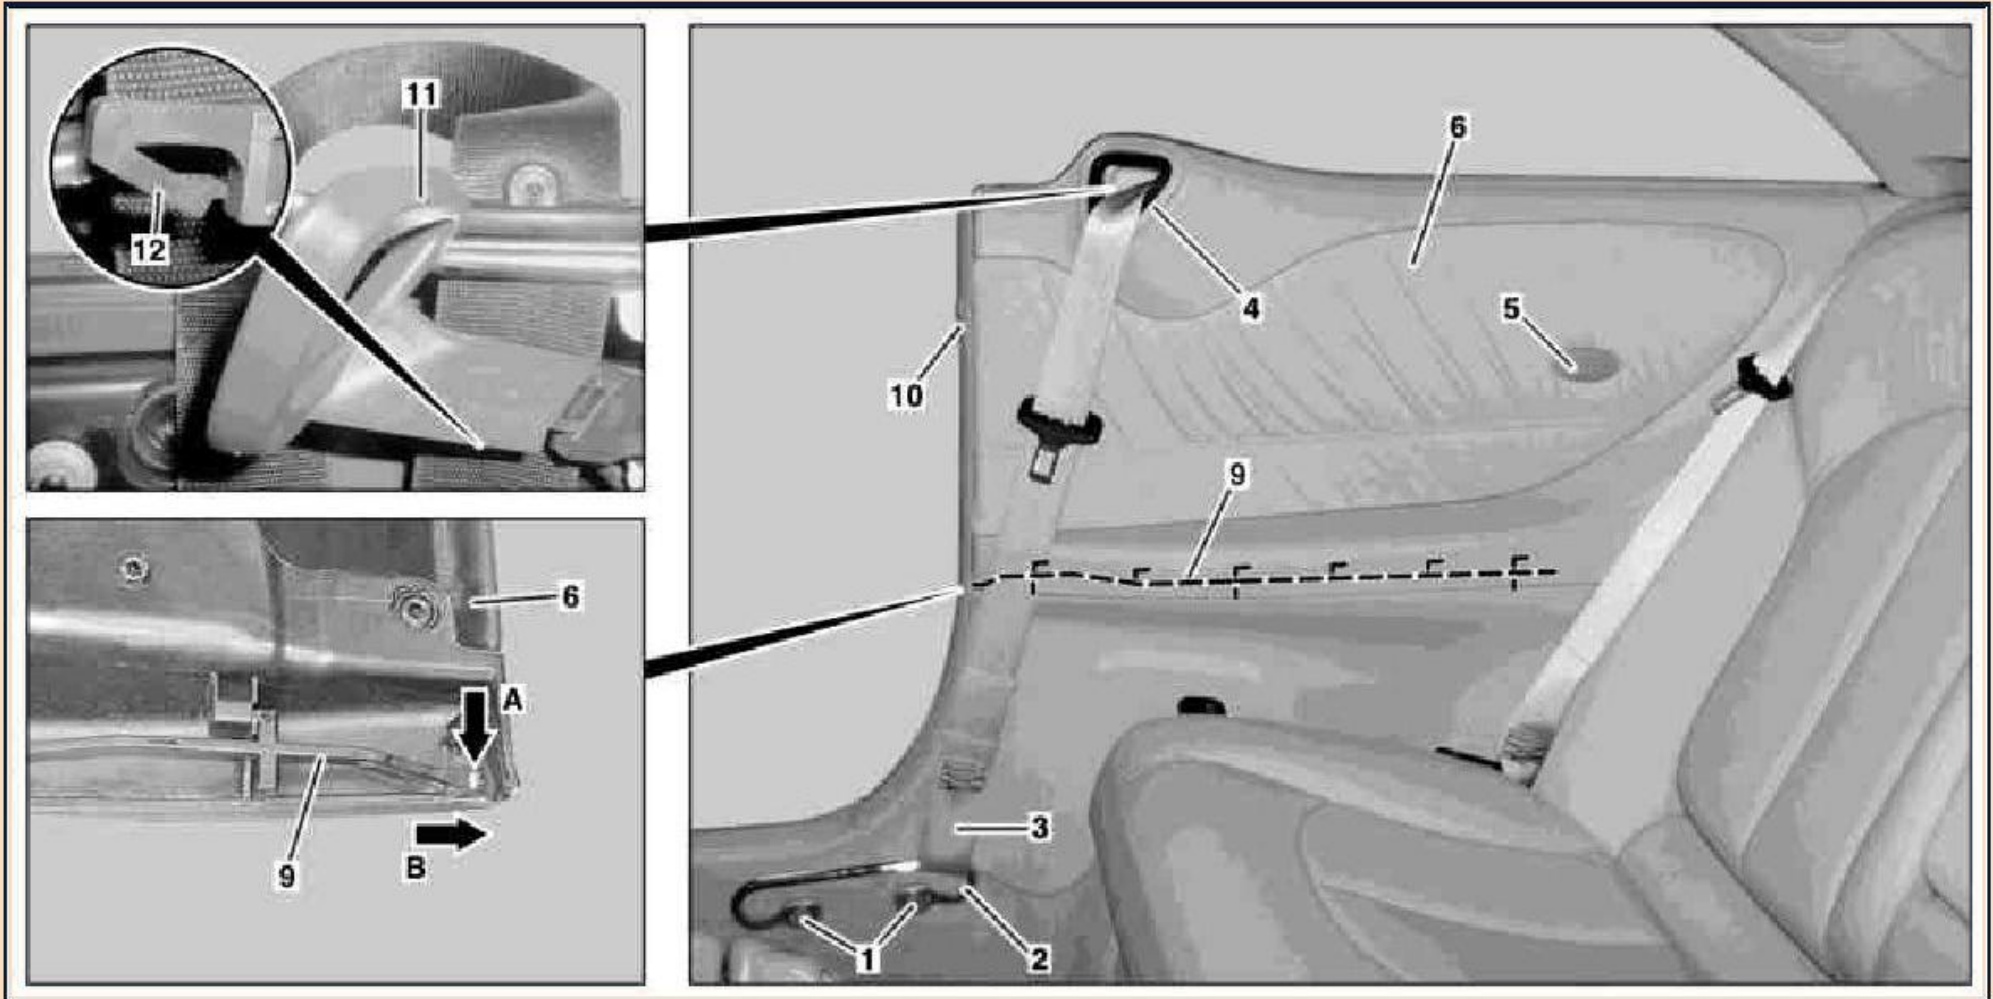

800 00 0101 00

- 1 Bolts
- 2 Seat belt end fitting
- 3 Seat belt
- 4 Rosette
- 7 Side bolster
- 8 Bottom side paneling

- 5 Sidebag sticker (with code (293)
Sidebag in left and right rear)
- 6 Upper side paneling
- 9 Locking strip




- 10 Edge guard
- 11 Seat belt extender
- 12 Catch hook


- S21/3 Left rear power window switch
- S21/4 Right rear power window switch



Modification notes

30.11.04	Document updated for current repair method	All steps	
----------	--	-----------	--


☒ ☒	Remove/Install		
1	Completely move left and right rear side window downward		
2	Unclip left and right door sill molding and remove		
3	Remove edge guard (10) in area of upper side wall paneling (6) and lower side wall paneling (8)		
4.1	Unscrew bolts (1) and remove belt end fitting (2)	<p>On vehicles with code (494) USA version: Not when removing right upper side wall paneling (6) or lower right side wall paneling (8).</p> <p> Installation: Fit seat belt (3) without twisting. Otherwise proper function of seat belt (3) is not ensured</p> <p> Nm</p>	BA91.40-P-1001-01A
5.1	Remove belt tensioning sensor	<p>On vehicles with code (494) USA version: When removing right upper side wall paneling (6) or lower right side wall paneling (8).</p> <p> See: ↓</p> <p>Remove/install seat belt with emergency tensioning retractor</p>	AR91.40-P-0630Q
6	Pull seat belt extender (11) out of upper side wall paneling (6) until catch hook (12) is accessible.		
7	Unclip seat belt extender (11) by pressing catch hook (12) and remove		
8	Unclip rosette (4) from upper side wall paneling (6).		
9	Remove seat belt (3) through rosette (4) and seat belt extender (11). Then remove		

	catch hook (12) and remove		
8	Unclip rosette (4) from upper side wall paneling (6).		
9	Remove seat belt (3) through rosette (4) and seat belt extender (11). Then remove rosette (4) and seat belt extender (11).		
10.1	Unclip sidebag sticker (5) and unscrew bolt below	On vehicles with code (293) Sidebag in left and right rear	
11	Hook removing and installing tool into eye (arrow A) and pull locking strip (9) to stop in direction of arrow (arrow B)	<p>i This unlocks the upper side wall paneling (6) from the lower side wall paneling (8).</p> <p>i Installation: Slide locking strip (9) to stop. Ensure that the locking strip (9) connects the upper side wall paneling (6) correctly with the lower side wall paneling (8).</p> <p></p>	116589016200
12	Remove upper side paneling (6) upward		
13	Remove side upholstery (7)		AR91.12-P-1710P
14	Unclip lower side wall paneling (8)	i Installation: Replace damaged retaining clips.	
15	Unclip left rear power window switch (S21/3) and right rear power window switch (S21/4) and install through installation opening with lines connected and lay down to side.		
16	Remove lower side wall paneling (8)		
17	Install in the reverse order		
18	Check seat belt (2) for free motion		

14	Unclip lower side wall paneling (8)	i Installation: Replace damaged retaining clips.	
15	Unclip left rear power window switch (S21/3) and right rear power window switch (S21/4) and install through installation opening with lines connected and lay down to side.		
16	Remove lower side wall paneling (8)		
17	Install in the reverse order		
18	Check seat belt (2) for free motion		

Nm Seat belts/emergency tensioning retractors

Number	Designation	Model
		209.3
BA91.40-P-1001-01A	Screw on belt end fitting	Nm 30

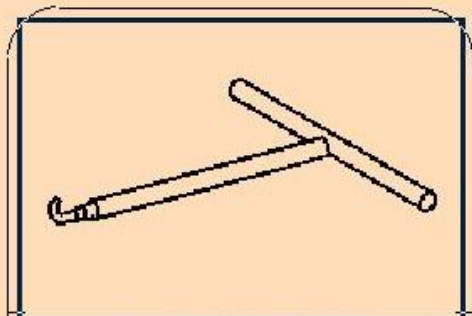

116 589 01 62 00