



70392, 70392-2 Mercedes-Benz W203/W209 Chassis

TS065

PLEASE READ BEFORE INSTALLATION

When installing the new H&R part number 70392 or 70392-2 on the front of your W203 or W209 chassis Mercedes, you must verify that you have the large bushing brackets before you begin disassembly.


Some vehicles came equipped with a small bracket that will not work with the new H&R bushing.
(See photo)

If your vehicle is equipped with the small brackets, you will need to purchase the large brackets from a Mercedes dealer.

The part numbers for the large brackets are listed below.

A203 323 12 40 (right front)

A203 323 11 40 (left front)

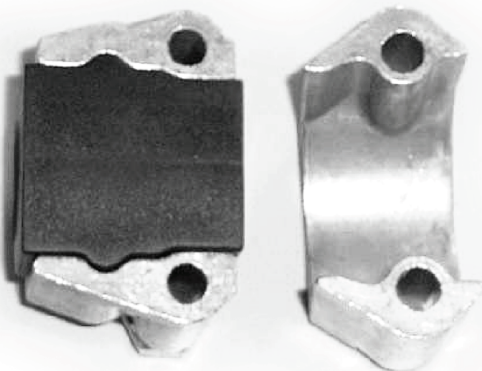

Large bracket
with H&R bushing

Small bracket