




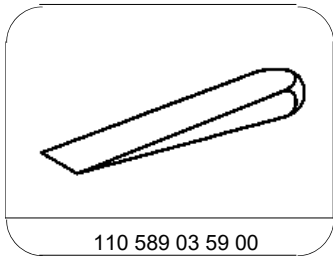


P68.30-2765-09

- | | | | | | |
|---|------------------------------------|----|-------------------------------------|----|------------------------------|
| 1 | Trunk floor paneling | 8 | Right soft top compartment paneling | 14 | Separation centering bracket |
| 2 | Lower rear center section paneling | 9 | Left side wall paneling | 15 | Left base bracket |
| 3 | Spreading clips | 10 | Right side wall paneling | 16 | Right base bracket |
| 4 | Clips | 11 | Threaded clips | 17 | Bolts |
| 5 | Ski bag rear wall paneling | 12 | Trunk lighting | 18 | Ski bag |
| 6 | Cross member paneling | 13 | Bolts | 19 | Plastic nuts |
| 7 | Left soft top paneling | | | | |

 	Remove/Install		
1	Open trunk lid		
2	Remove trunk floor paneling (1)		
3	Remove spreading clip (3) and clip (4) from bottom rear center section paneling (2)		
4	Remove bottom rear center section paneling (2)		
5	Unclip clip (4) from left side wall paneling (8)	 Assembly wedge	*110589035900
6	Unclip threaded clip (11) from left side wall paneling (9)		
7	Remove left side wall paneling (8), disconnect connector for trunk illumination (12)		
8	Unclip clip (4) from right side wall paneling (8)		
9	Unclip threaded clip (11) from right side wall paneling (10)		
10	Remove right side wall paneling (10)		
11	Unclip clip (4) from cross member paneling (6)	 First unclip clip (4) at side of trunk because the soft top compartment is still open	
12	Open soft top compartment cover		
13	Cover vehicle in rear area	 To prevent scratching the paint during assembly work.	
14	Remove retractable trunk partition		AR68.50-P-3000QA
15	Unscrew bolts (13) from separation centering bracket (14)		
16	Remove separation centering bracket (14)		
17	Unclip clip (4) from cross member paneling (6)		
18	Remove cross member paneling (6)		
19	Unscrew plastic nuts (19)		
20	Remove left base bracket (15)		
21	Unscrew threaded clip (11) from left soft top compartment paneling		
22	Unclip clip (4) from left soft top compartment paneling (7)		

23	Remove left soft top compartment paneling (7)		
24	Unscrew plastic nuts (19)		
25	Remove right base bracket (16)		
26	Unscrew threaded clip (11) from right soft top compartment paneling		
27	Unclip clip (4) from right soft top compartment paneling (8)		
28	Remove right soft top compartment paneling (8)		
29	Open ski bag (18) and unscrew bolts (17)		
30	Remove ski bag (18)		
31	Unclip clip (4) from ski bag rear wall paneling (5)		
32	Remove ski bag rear wall paneling (5)		
33	Install in the reverse order		



110 589 03 59 00

Assembly wedge