


MODEL 218

- 1 Passenger side trim strip
- 2 Bolts
- 3 Center air outlet
- 4 Electrical connector
- 5 Electrical connector
- 6 Electrical connector
- 7 Electrical line

A70/1 Analog clock

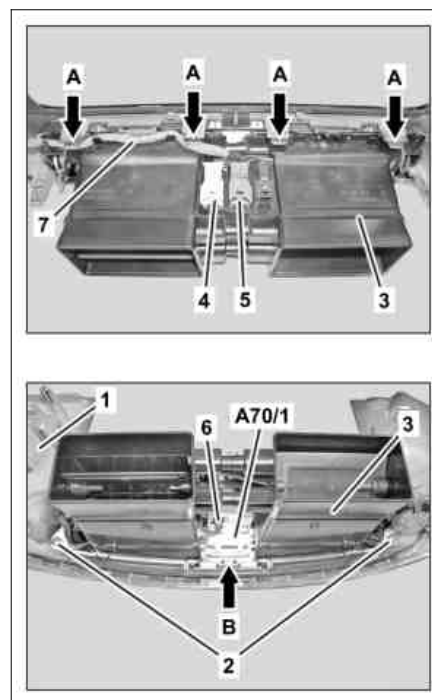

P83.10-2768-03

☒ ☒	Remove/install		
1	Remove trim strip on passenger-side (1)		AR68.10-P-1180EL
2	Remove bolts (2)		
3	Unhook electrical line (7) from center air vent (3)		
4	Unclip center air vent (3) (arrows A and B) and remove from trim strip on passenger-side (1)	<b>i</b> Unclip first from upper clips (arrow A).	
5	Unclip electrical connectors (4, 5) from center air vent (3)		
6	Detach electrical connectors (6) from analog clock (A70/1)		
7	Route electrical line (7) out of center air vent (3)		
8	Unclip analog clock (A70/1) from center air vent (3)	When replacing the center air vent (3) or analog clock (A70/1).	
9	Install in the reverse order		