


## MODEL 219.3

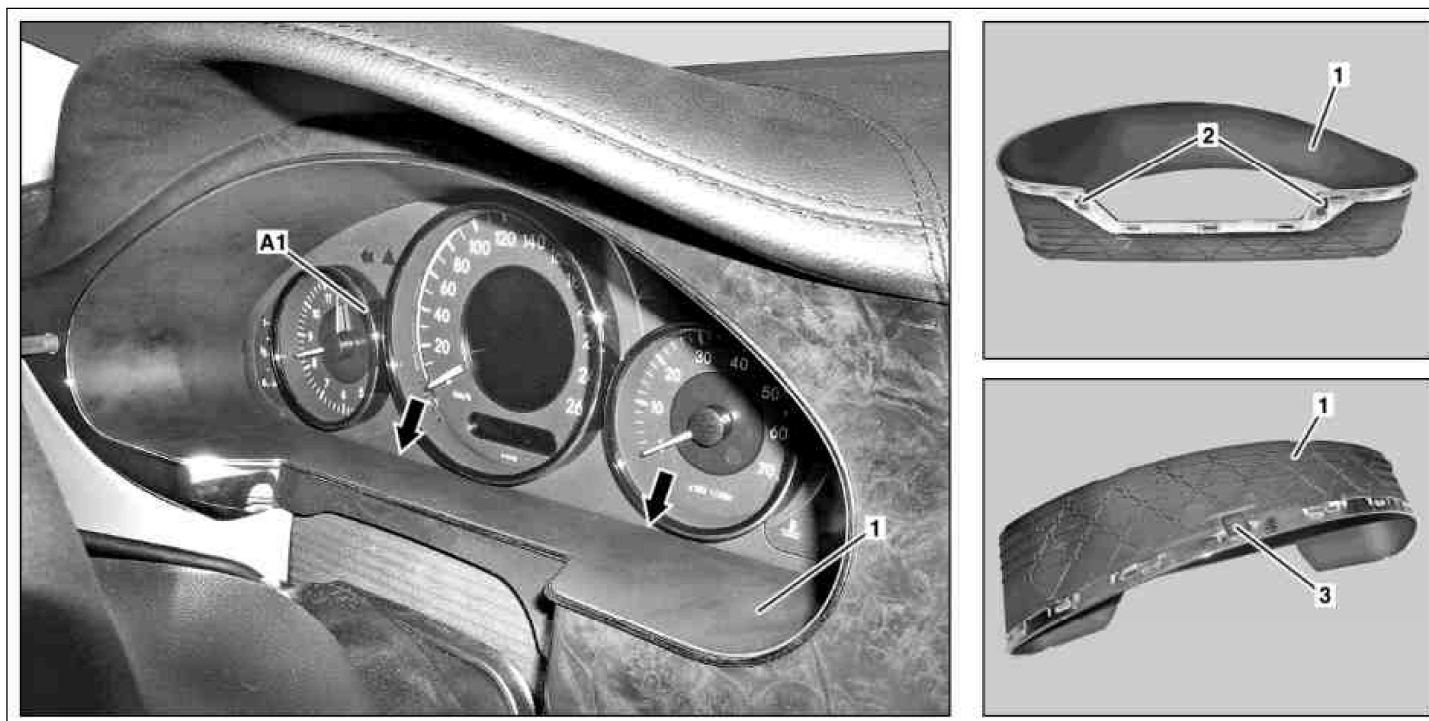

P68.10-3288-09

1 Covering  
2 Lower catch hook

3 Upper catch hook

A1 Instrument cluster

☒ ☒	Remove/Install		
1	Move steering wheel as far back and low as possible	i See Operating Instructions	
2	Insert your fingers into gap (arrows between cover (1) and instrument cluster (A1), and pull cover (1) towards rear until it disengages from lower catch hooks (2)	⚠ Carefully unclip cover (1), otherwise the bottom catch hook (2) can break	
3	Unclip cover (1) from upper catch hooks (3) by hand and pull out of instrument panel toward rear	⚠ Carefully unclip cover (1), otherwise the upper catch hook (3) can break.	
4	Install in the reverse order		