


MODEL 219.3

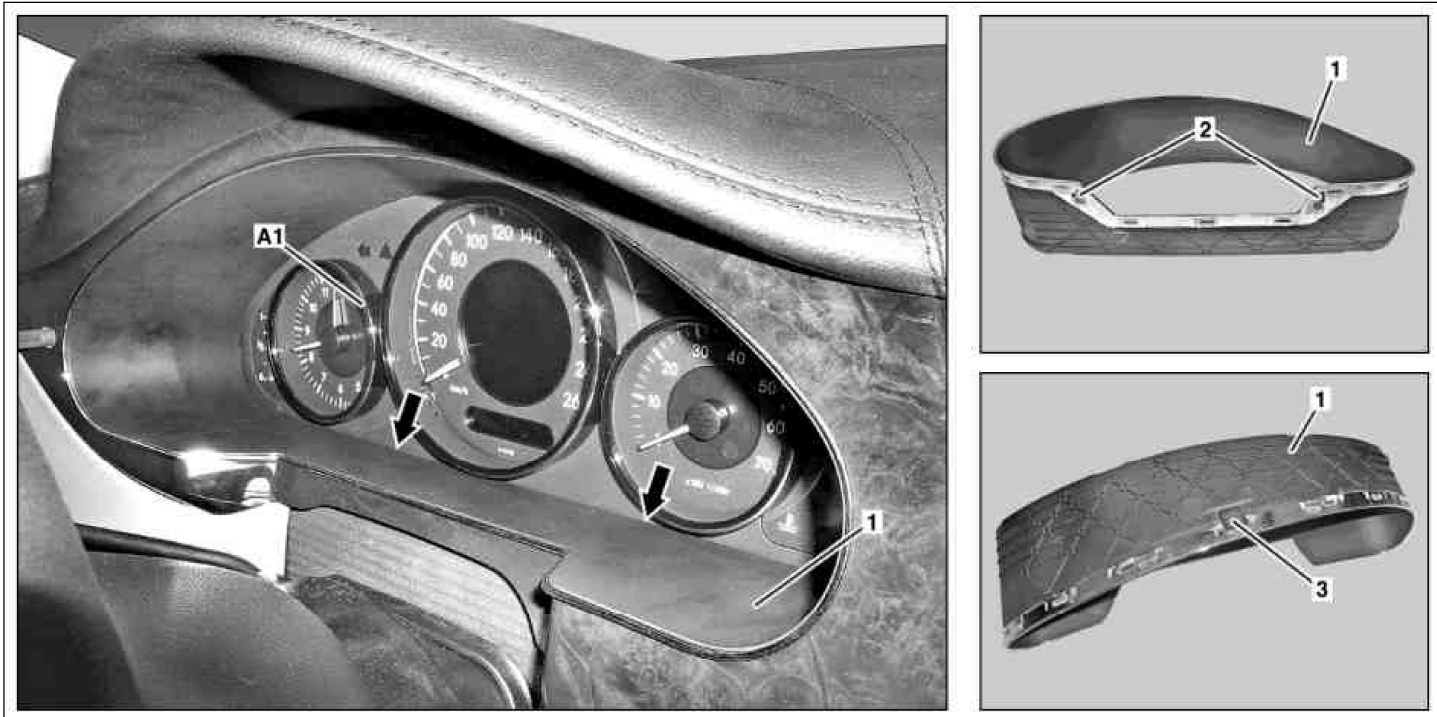

P68.10-3288-09

1 Covering
2 Lower catch hook

3 Upper catch hook

A1 Instrument cluster

| ☒ ☒ | Remove/Install | | |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|--|
| 1 | Move steering wheel as far back and low as possible | i See Operating Instructions | |
| 2 | Insert your fingers into gap (arrows between cover (1) and instrument cluster (A1), and pull cover (1) towards rear until it disengages from lower catch hooks (2) | ⚠ Carefully unclip cover (1), otherwise the bottom catch hook (2) can break | |
| 3 | Unclip cover (1) from upper catch hooks (3) by hand and pull out of instrument panel toward rear | ⚠ Carefully unclip cover (1), otherwise the upper catch hook (3) can break. | |
| 4 | Install in the reverse order | | |