


MODEL 219.3

Front stowage compartment

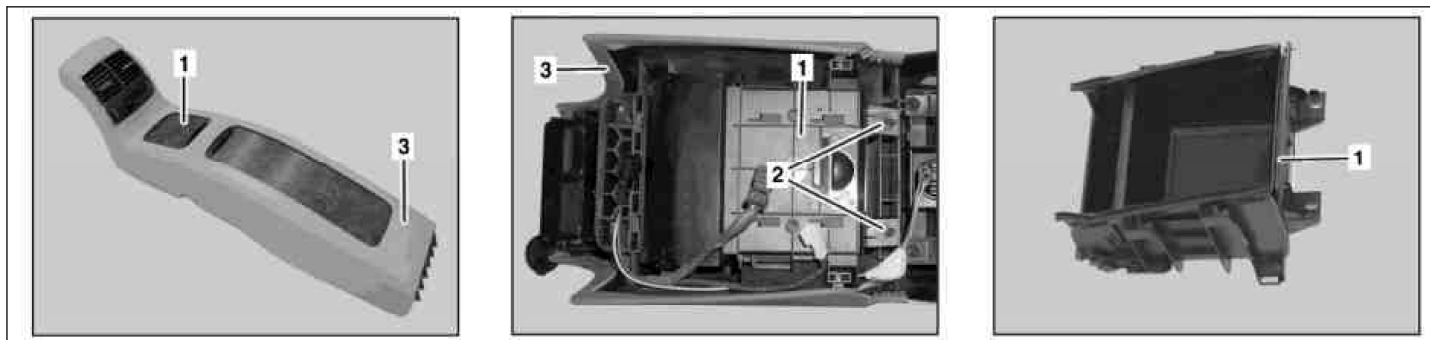


P68.20-3293-07

1 Front stowage compartment

2 Bolts

3 Rear center console.

	Remove/Install		
1	Remove rear center console (3)		AR68.20-P-2020TX
2	Unscrew bolts (2)		
3	Remove front stowage compartment (1) from rear center console (3)		
4.1	Remove roller blind from front stowage compartment (1)	Only when replacing front stowage compartment (1).	AR68.20-P-2464TX
5	Install in the reverse order		