


## MODEL 219.3

Shown with code (889) Keyless Go

- 1 Selector lever boot
- 2 Center console cover
- 3 Selector lever handle
- 4 Lock
- 5 Selector lever

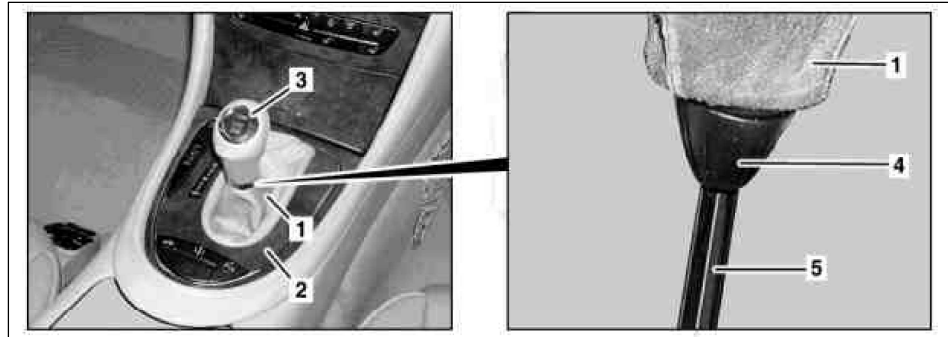

P68.20-3247-04

☒ ☒	Remove/Install		
1	Move selector lever (5) to position "N"		
2.1	Remove transmitter key from transmission range of vehicle	On vehicles with code (889) Keyless go <b>i</b> Engine is switched off	
3	Unclip selector lever boot (1) manually from center console cover (2)	<b>i</b> Selector lever boot (1) is arrested in center console cover (2) with four catch hooks	
4	Pull selector lever boot (1) over selector lever handle (3)		
5	Unlock lock (4) counterclockwise		
6	Remove selector lever handle (3) together with selector lever boot (1) from selector lever (5)		
7	Install in the reverse order		