
MODEL 219.3

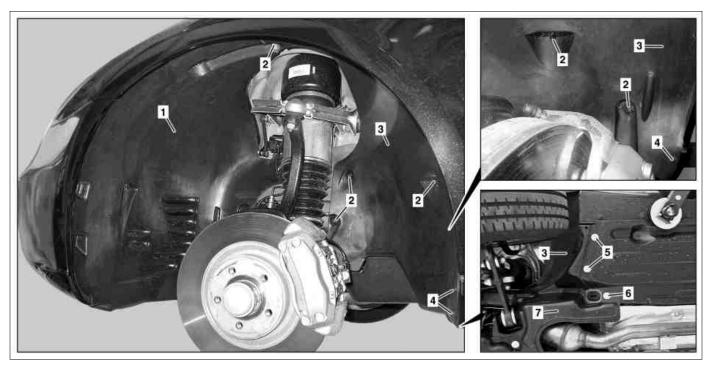


P88.10-2154-09

## Shown on left side of vehicle and front wheel removed

- Front section, fender liner
- 2 Nut
- Rear section, fender liner
- 3 4 Expansion rivets

- 5 Bolts
- 6 Screw
- Rear section, bottom engine compartment paneling

XX	Remove/Install		
1	Raise vehicle with lifting platform		AR00.60-P-1000TX
2.1	Turn front wheels all the way to the left	When removing right rear fender liner section (3).	
2.2	Completely turn front wheels to right	When removing left rear fender liner section (3).	
3	Unscrew nuts (2)		
4	Remove expansion rivets (4)		
5	Unscrew bolts (5)		
6	Unscrew bolt (6) and loosen rear bottom engine compartment paneling section (7)		
7	Loosen rear fender liner section (3) from front fender with mounting wedge and remove	<b>3</b>	*110589035900
		i Installation: Ensure that rear fender liner section (3) and rubber seals are seated correctly.	
8.1	Remove front fender liner section (1) in front fender.	Only when removing front fender liner section (1) and rear fender liner section (3).	AR88.10-P-1310TX
9	Install in the reverse order		

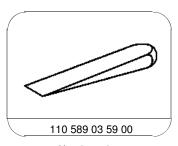

Mounting wedge