


MODEL 219.3

- 1 Paneling
- 2 Cover
- 3 Adhesive tape
- 4 Clamps
- 5 Ashtray housing
- 6 Center console cover

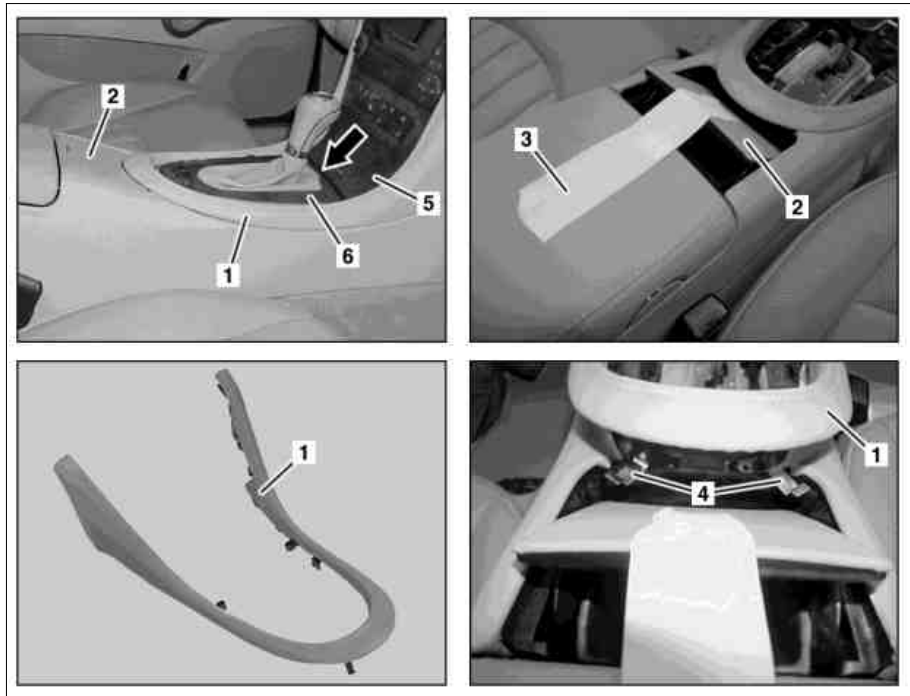

P68.20-3254-06

☒ ☒	Remove/install		
1	Open ashtray housing (5)		
2	Press center console cover (6) toward rear and hold down. Then unclip center console cover (6) upward in front area (arrow) Then raise center console cover (6) at front and slide toward front until center console cover (6) is unhooked in rear area.		
3	Fasten cover (2) with adhesive tape (3) in half opened position as illustrated	i Installation: Remove any glue residues from adhesive tape (3) if necessary	
4	Unclip paneling (1) manually upward in area of clips (4)		
5	Remove paneling (1) from center console toward rear	⚠ Carefully remove paneling (1) Danger of damaging cover (2) with clips (4)	
6	Install in the reverse order		