







MODEL 219.3 with CODE (551) Anti-theft alarm system (ATA [EDW])

- 1 Nuts
 2 Bracket
 3 Cable tie
 4 Electrical connector
 5 Screw

H3/1 Alarm signal horn with additional battery

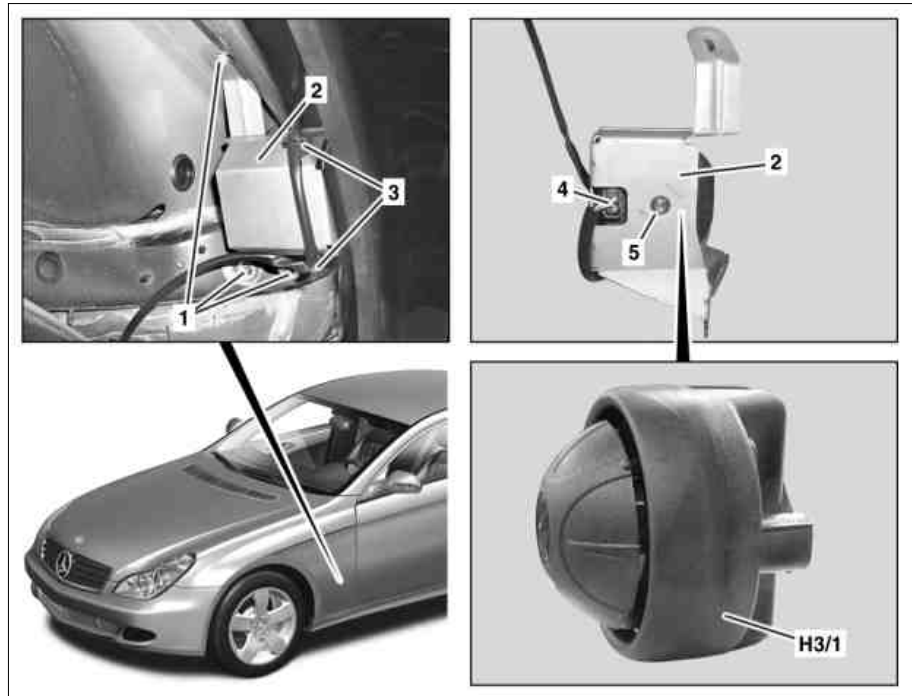

P80.50-2508-06

 	Remove/install		
1.1	Switch off ignition and leave transmitter key in EIS [EZS] control unit.	On vehicles without code (889) Keyless go	
1.2	Switch off ignition and remove transmitter key from vehicle transmitter range	On vehicles with code (889) Keyless go	
2	Remove rear fender liner on left front fender		AR88.10-P-1300TX
3	Turn front wheels to left		
4	Unscrew nuts (1)	 Replace nuts (1).	
5	Remove alarm siren with additional battery (H3/1) and bracket (2) until the electrical connector (4) is accessible		
6	Remove cable ties (3)	 Installation: Replace cable tie (3).	
7	Disconnect electrical connector (4)		
8	Unscrew screw (5) and remove alarm signal siren with additional battery (H3/1) from mount (2)	 Screwdriver bit for internal Torx bolt with pin guide	*BA80.50-P-1001-01C
9	Install in the reverse order		

 Anti-theft alarm

Number	Designation		Model 219
BA80.50-P-1001-01C	Bolt/nut, alarm signal horn to bracket	Nm	14