


- 1 Rotate detent eccentric bolt (g) counterclockwise by approx. half a turn using Allen wrench while simultaneously pushing toward rear into slot until raised section (h) of spring-loaded detent eccentric (b) engages in holddown clip (d).

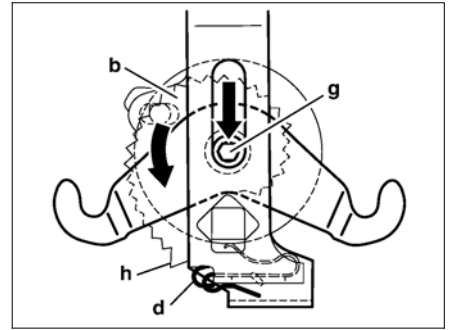

P42.20-0209-01