
MODEL 219.3

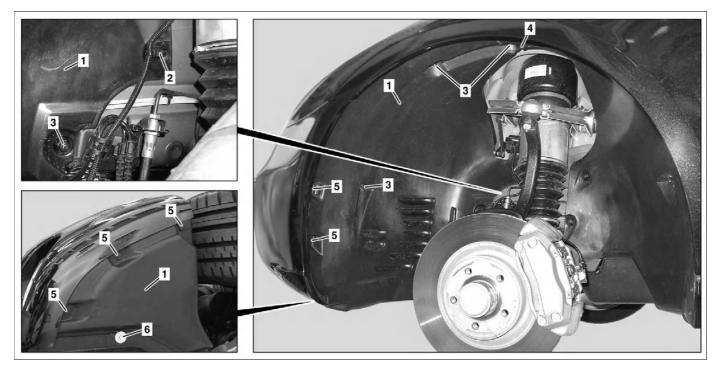


P88.10-2153-09

Shown on left side of vehicle and front wheel removed

- 1 Front section, fender liner
- 2 Line bracket
- 3 Nuts

- 4 Rear section, fender liner
- 5 Expansion rivet
- 6 Screw

XX	Remove/Install		
1	Raise vehicle with lifting platform		AR00.60-P-1000TX
2.1	Turn front wheels all the way to the left	Only when removing left front fender liner section (1).	
2.2	Completely turn front wheels to right	Only when removing right front fender liner section (1).	
3	Detach line holder (2)	i Installation: Check line holder (2), replace if necessary	
4	Unscrew nuts (3).		
5	Remove expansion rivets (5)		
6	Unscrew bolt (6)		
7	Loosen rear fender liner section (4) with mounting wedge	i Loosen rear fender liner section (4) until front fender liner section (1) can be removed	*110589035900
8	Remove front fender liner section (1) from front fender.	i Installation: Ensure that front fender liner section (1) and rear fender liner section (4) are seated correctly	
9	Install in the reverse order		

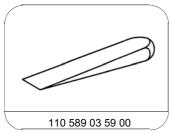

Mounting wedge