


## MODEL 219.3

- 1 C-pillar paneling
- 2 Edge guard
- 3 Belt guide
- 4 Seat belt
- 5 Sheet metal nut
- 6 Clip

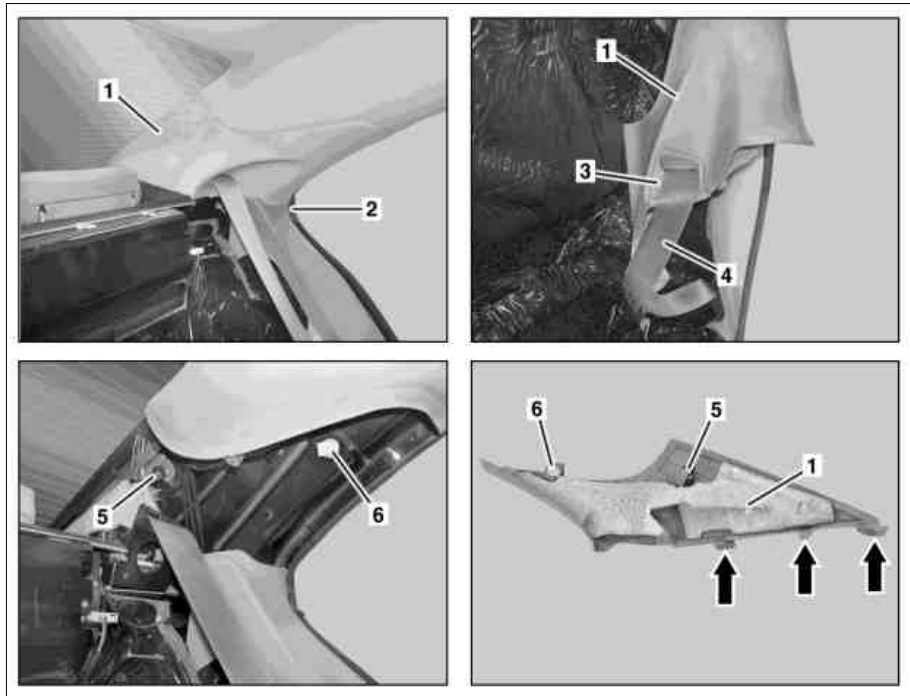

P68.30-3033-06

✕	<b>Remove</b>		
1	Remove rear seat backrest		AR91.12-P-1620TX
2	Press edge guard (2) to side in area of C-pillar paneling (1)		
3	Pull C-pillar paneling (1) toward front, slightly tilt in direction of center of vehicle and remove from C-pillar toward front		
4	Remove belt guide (3) from paneling Unclip C-pillar (1)		
5	Remove seat belt (4) from paneling Remove C-pillar (1)		
✕	<b>Install</b>		
6	Remove sheet metal nut (5) and clip (6) from C-pillar mounts and insert into C-pillar paneling (1)	<b>i</b> Sheet metal nut (5) and clip (6) remain in C-pillar mounts when removing C-pillar paneling (1).	
7	Pull seat belt (4) in paneling in C-pillar paneling	<b>i</b> Do not twist seat belt (4)	
8	Clip belt guide (3) into C-pillar paneling (1)		
9	Insert C-pillar paneling (1) with guides (arrows) into rear shelf	<b>i</b> Hold C-pillar paneling (1) tilted slightly in direction of center of vehicle	
10	Clip C-pillar paneling (1) to C-pillar	<b>i</b> C-pillar paneling (1) fit can be adapted by pressing the sheet metal nut (5) into the mount.	
11	Install rear seat backrest		AR91.12-P-1620TX