


P68.10-3471-09

1 Trim strip  
2 Air nozzle  
3 Bolt

4 Wiring harness  
5 Electrical connectors  
6 Center air outlet

7 Covering  
N72/1 Upper control panel control unit

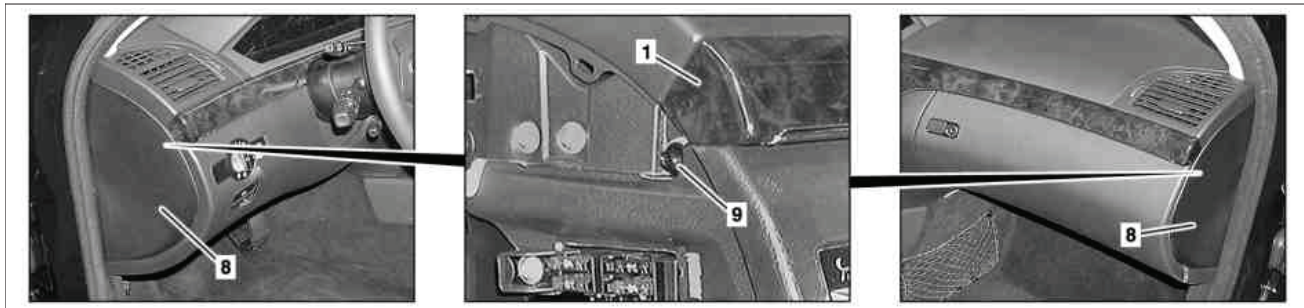

P68.10-3550-07







1 Trim strip

8 Cover


9 Bolt

**Modification notes**

13.12.05	Modified mount for trim strip	Steps 3, 4	
----------	-------------------------------	------------	--

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Move steering column back and down		
2	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	 Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
3	Unclip covers (8) from instrument panel		*110589035900
4	Remove bolts (9)		
5	Unclip air nozzle (2) and unscrew bolt (3).		
6	Unclip trim strip (1) from outsides toward center from instrument panel	 <b>Installation:</b> Correctly position cover (7) on left and right. 	*110589035900
7	Remove trim strip (1), tilt upward and expose electric wiring harness (4).		
8	Separate electrical connectors (5)		

9	Remove trim strip (1) from vehicle and lay down.	ⓘ Lay trim strip (1) down on suitable subsurface to prevent scratching the surface of the trim strip (1).	
10.1	Remove upper control panel control unit (N72/1) and then remove center air nozzle (6) from trim strip (1).	When replacing trim strip (1).  ⓘ See: ↓ Remove and install center air nozzle	AR83.10-P-4503SX
11	Install in the reverse order		

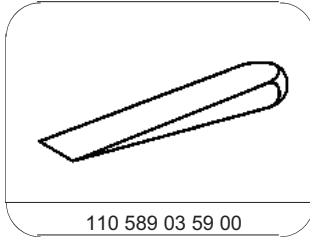

110 589 03 59 00

Mounting wedge