


P68.10-3283-09

- | | | |
|---|-------------------------|---------------------------------|
| 1 Driver-side instrument panel bottom section | 5 Left cover | B10/4 In-car temperature sensor |
| 2 Trim at the center console | 6 Release handle | F34 Interior fuse box |
| 3 Trim strip | 7 Bolt | N73 EIS [EZS] control unit |
| 4 Trim ring | 8 Bolts | S1 Rotary light switch |
| | 9 Center console, front | |

Shown on vehicle as of 1.06.06 with code (494) USA version



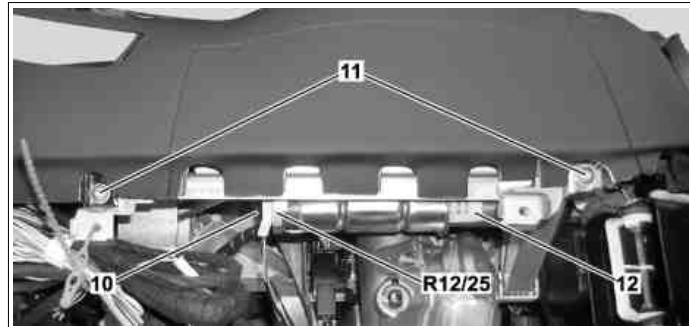



- 10 Electrical connector
- 11 Bolts
- R12/25 Driver kneebag squib



P91.60-3327-10

Modification notes


5.7.06	"Disconnect/connect battery ground line" removed		
8.8.06	Kneebag for vehicles with code 494, added	Operation steps 11 and 12	

 	Remove/install		
1	Move steering wheel upward to limit stop		See Operator's Manual
2	Remove left cover below instrument panel		AR68.10-P-1500TX
3	Remove center console paneling (2)		AR68.20-P-5169TX
4	Remove trim strip (3) from instrument panel		AR68.10-P-1180TX
5	Unscrew round cover (4) with slotted nut wrench and press EIS control unit (N73) toward front out of driver-side instrument panel bottom section (1)		*210589000700
			Installation: Ensure that EIS control unit (N73) is positioned correctly
6	Unclip left cover (5) from instrument panel with mounting wedge		*110589035900
7	Unhook hand brake release cable from release handle (6)		


8	⚠ Danger! ⓘ Risk of fire and explosion caused by machining/treating magnesium components Remove bolts (7) Information on machining/treating magnesium components	Keep away from ignition sources and open flames.	AS60.00-Z-0006-01R AH60.00-P-0023-01R
9	⚠ Danger! ⓘ Risk of fire and explosion caused by machining/treating magnesium components Unscrew bolts (8) with battery-powered screwdriver Information on machining/treating magnesium components	Keep away from ignition sources and open flames.	AS60.00-Z-0006-01R AH60.00-P-0023-01R
10	Disconnect electrical connectors (10) at driver kneebag squib (R12/25)	ⓘ Vehicles as of 1.06.06 with code (494) USA version	
11	Remove bolts (11)	ⓘ Vehicles as of 1.06.06 with code (494) USA version Nm	*BA91.60-P-1005-01G
12	Unhook driver-side instrument panel bottom section (1) from front center console (9) and pull toward rear until electrical connectors are accessible		
13	ⓘ Disconnect electrical connectors from rotary light switch (S1) and inside air temperature sensor (B10/4) Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
14	Remove interior fuse box (F34) from driver-side instrument panel bottom section (1)	ⓘ The electrical lines remain installed on the interior fuse box (F34)	
15	Remove driver-side instrument panel bottom section (1)		
16	Install in the reverse order		

Nm Airbag

Number	Designation	Model 219.3 with code 494
BA91.60-P-1005-01G	Bolt, kneebag to strut	Nm 4

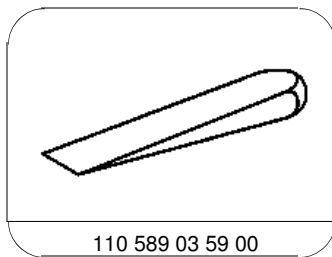

Wedge tool

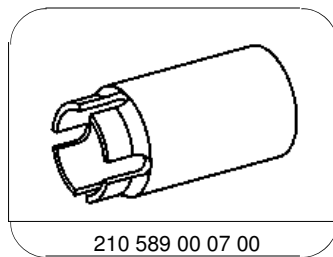

Claw-type wrench for rosette on ignition switch