
MODEL 219.3

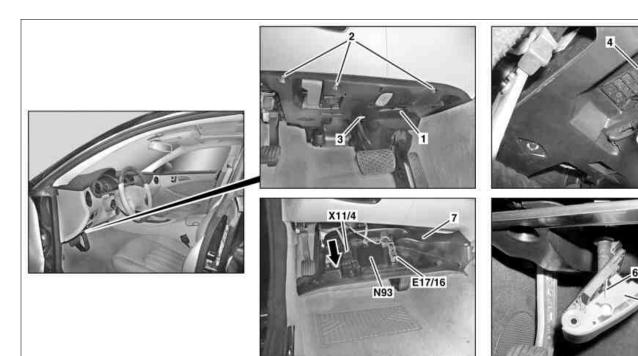

P68.10-3270-09

1	Cover	5	Hood release	E17/16	Left front footwell lamp
2	Bolts	6	Release cable	N93	Central gateway control unit
3	Clip	7	Air duct	X11/4	Data link connector
4	Rolt				

X	Remove/Install	
1	Move driver's seat all the way down	i See Operating Instructions
2	Switch off vehicle interior lighting	i See Operating Instructions
3	Unscrew bolt (4)	
4	Pull hood release (5) out of the cover (1), detach release cable (6) and remove hood release (5).	
5	Unscrew bolts (2)	
6	Unclip clip (3) from cover (1)	
7	Fold cover (1) downward	i Installation: Ensure that air duct (7) is connected correctly to AC housing.
8	Slide lock on data link connector (X11/4) in direction of arrow and remove data link connector (X11/4) from cover (1)	
9	Unclip central gateway control unit (N93) from cover (1) and lay down to side with lead connected	
10	Unclip left front footwell lamp (E17/16) from cover (1) and lay down to side with lead connected	
11	Remove cover (1) out of the footwell	
12	Install in the reverse order	