







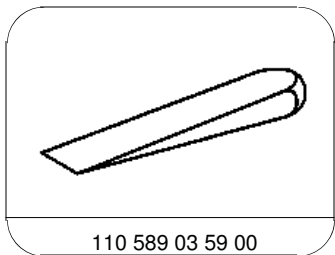
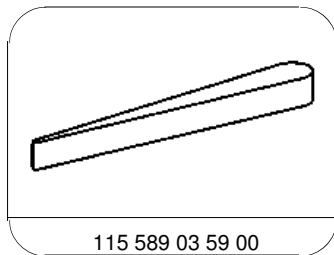


1	Completely open crank window in left or right front door	 See Operating Instructions	
2	Unclip mirror triangle cover (2) in upper area and remove from door lining (1)		*110589035900
3	Remove insulating wedge (3)		
4	Unlock tweeter (H4/1h1) or tweeter (H4/2h1) on latching hook (4) and remove mirror triangle cover (2)		
5	Install long wedge behind power window cover (5) from top, unclip power window cover (5) and remove		*115589035900
6	Unclip door handle recess cover (6) in lower area and remove downward		
7	Unscrew screws (7) and remove trim panel (8)	 Ensure that trim panel (8) is seated correctly on door lining (1)	
8	Unscrew screw (9) and remove door lock cover (10)		
9	Unclip cover (11) from front and remove		*115589035900
10	Unlock electrical connector (12) with suitable screwdriver on latching hook (13) and remove		
11	Remove screws (14)		
12	Press door lining (1) on mounting clips (15) off of inner door panel with mounting wedge	 Move mounting wedge directly to mounting clips (15) and ensure that the retainer tabs on the retainer tabs (15) do not tear out of the door lining (1)   Installation: Replaced damaged mounting clips (15).	*110589035900
13	Tilt door lining (1) upward toward inside until Bowden cable (16) is accessible		
14	Unhook Bowden cable (16) from inner door opener		
15	Disconnect electrical connectors (17) from left front door control unit (N69/1) or right front door control unit (N69/2)		
16	Remove door lining (1)		
17	Install in the reverse order		



110 589 03 59 00

Mounting wedge



115 589 03 59 00

Long wedge