


MODEL 219.3 with CODE (540) Electric roller blind for rear window

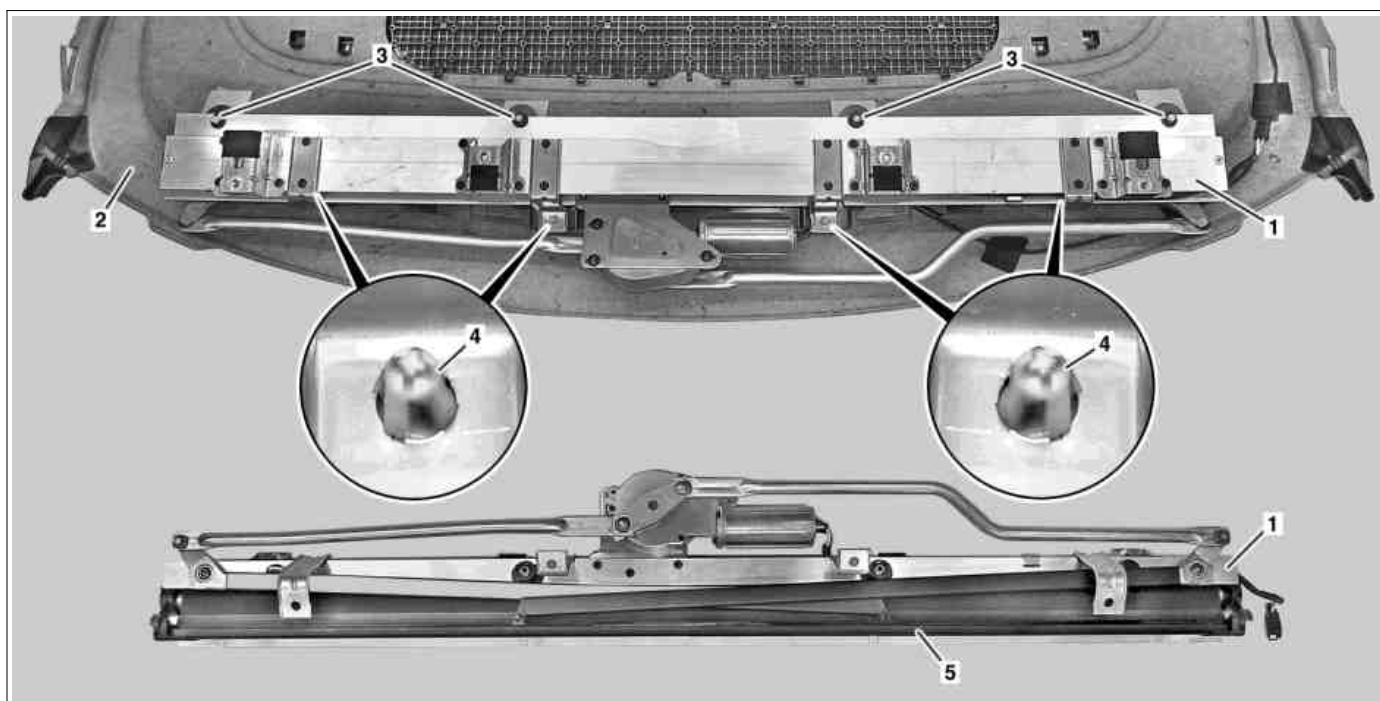


P68.50-2297-09

1 Electric roller blind  
2 Rear shelf paneling

3 Nuts  
4 Clip

5 Sun shade compartment

	Remove/Install		
1	Remove rear shelf paneling (2)		AR68.30-P-4581TX
2	Unscrew nuts (3)		
3	Unclip electrical roller blind (1) from clips (4) on rear shelf paneling (2)		
4	Unclip sun shade compartment (5) of electric roller blind (1) from rear shelf paneling (2)		
5	Remove electrical roller blind (1) from rear shelf paneling (2)		
6	Install in the reverse order		