


P68.30-3049-09

Shown with code (540) Electric sun shade for rear window

- 1 Rear shelf paneling
- 2 Expansion clip
- 3 Bolt (with code (540) Electric sun shade for rear window)
- 4 Electrical connector (with code (540) Electric sun shade for rear window)
- 5 Electrical connector
- 6 Foam rubber
- 7 Electrical roller blind (with code (540) Electric sun shade for rear window)
- 8 Insulation mat

- 1 Rear shelf paneling
- 7 Electrical roller blind (with code (540) Electric sun shade for rear window)

E21 Center high-mounted stop lamp

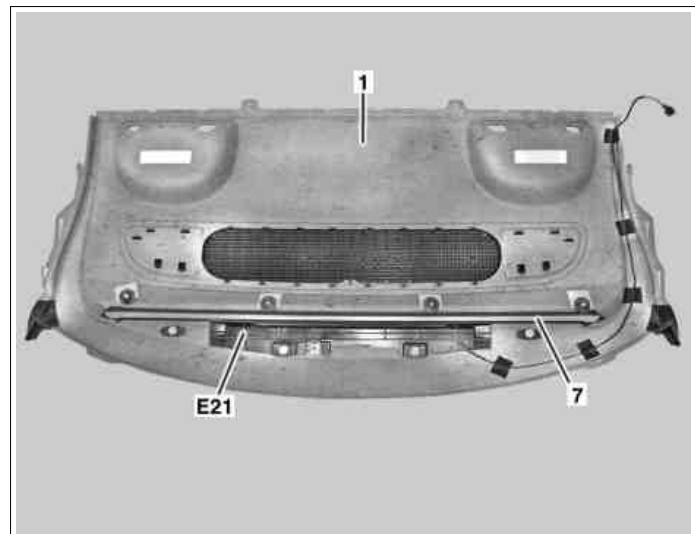

P68.30-3050-11

☒ ☒	Remove/Install		
1	Completely move both front seats toward front	i See Operating Instructions	
2	Remove paneling at both C-pillars		AR68.30-P-4490TX
3	Remove rear headrests		AR91.16-P-1770TX
4.1	Remove speaker in rear shelf	On vehicles with code (540) Electric sun shade for rear window, in combination with code (810) Sound system	AR82.62-P-7836TX
5	Remove expansion clips (2)		
6.1	Remove screws (3)	On vehicles with code (540) Electric sun shade for rear window i Accessible through luggage compartment	

7	Lift rear shelf paneling (1) and disconnect electrical connector (4) from electric roller blind (7) as well as electrical connector (5) for wiring harness from center high-mounted stop lamp (E21).	<p>i Electrical connector (4) only on equipment with code (540) electric sun shade for rear window</p>	
8.1	Lift rear shelf paneling (1) and remove foam rubber element (6)	<p>On vehicles with code (540) Electric sun shade for rear window and without code (810) Sound system</p> <p>i Foam rubber element (6) is glued on</p> <p>i Installation: Glue on foam rubber element (6) with double-sided adhesive tape</p>	
9	Lift rear shelf paneling (1), pull toward front and remove	<p>i Observe insulating mat (8) below rear shelf paneling (1)</p>	
10.1	Remove electrical roller blind (7)	Only when replacing rear shelf paneling (1) on vehicles with code (540) Electric sun shade for rear window.	AR68.50-P-4600TX
11	Install in the reverse order		