


MODEL 219.3

Front center console

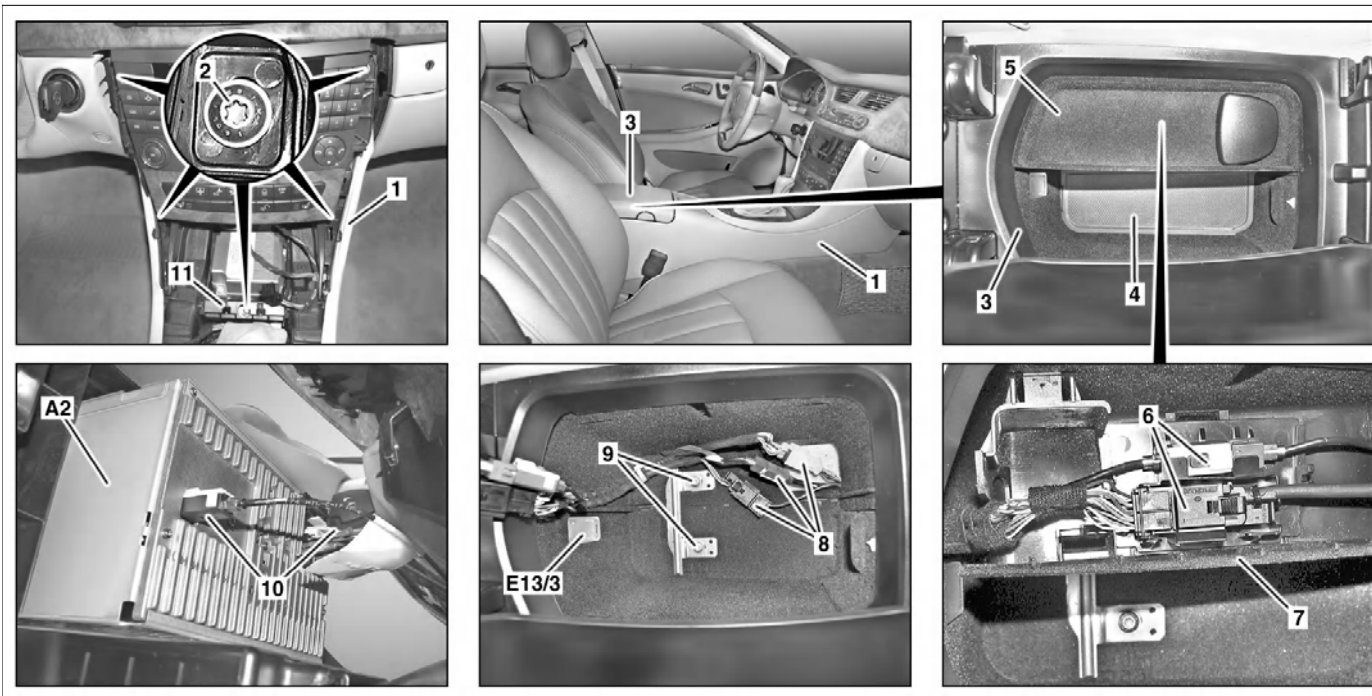


P68.20-3251-09



Shown with code (388) Portable cell phone, UPCI system and code (525) MB Audio 50 APS radio

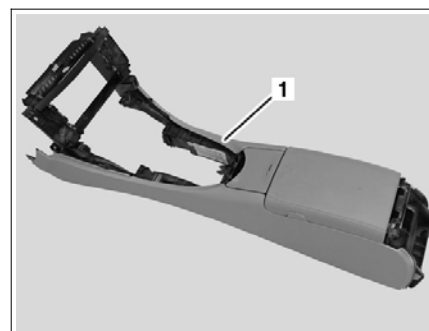

- 1 Center console, front
- 2 Bolts
- 3 Stowage compartment
- 4 Insert
- 5 Cell phone holder
(with code (386) Preinstallation for portable cell phone, UPCI system or code (388) Portable cell phone, UPCI system or code (494) USA version or code (498) Japan version)
- 6 Electrical connectors
(with code (386) Preinstallation for portable cell phone, UPCI system or code (388) Portable cell phone, UPCI system or code (494) California version or code (498) Japan version)
- 7 Spectacles compartment
(with code (386) Preinstallation for portable cell phone, UPCI system or code (388) Portable cell phone, UPCI system or code (494) USA version or code (498) Japan version)
- 8 Electrical connectors
(with code (386) Preinstallation for portable cell phone, UPCI system or code (388) Portable cell phone, UPCI system or code (494) USA version or Code (498) Japan version)
- 9 Bolts
- 10 Electrical connectors
- 11 Auxiliary lateral bridge
- A2 Radio
- E13/3 Stowage compartment illumination

- 1 Center console, front



P68.20-3245-01

 	Remove/install		
1	Remove rear center console		AR68.20-P-2020TX
2	Remove cover on center console		AR68.20-P-2350TX
3	Move selector lever to rear-most position		

4	Remove ashtray housing from front center console (1)	i Installation: Check ashtray housing mechanism for proper function, if necessary loosen threaded connection of front center console (1) and tighten front center console (1) without tension.	AR68.20-P-2400TX
5	Remove paneling from front center console (1)		AR68.20-P-5169TX
6	Remove bolts (2)	i Installation: Ensure that front center console (1) is installed without tension.	
7	Remove auxiliary lateral bridge (11) from front center console (1).		
8	Open stowage compartment (3) and remove insert (4).		
9	Unclip cell phone holder (5) manually from stowage compartment (3)	On vehicles with Code (386) Preinstallation for portable cell phone, UPCI system or Code (388) Portable cell phone UPCI system or Code (494) USA version or Code (498) Japan version	
10	Unclip electrical connectors (6) from spectacles compartment (7) and lay cell phone holder (5) down to side	On vehicles with Code (386) Preinstallation for portable cell phone, UPCI system or Code (388) Portable cell phone, UPCI system or Code (494) USA version or Code (498) Japan version	
11	Unclip spectacles compartment (7) from stowage compartment (3) with suitable screwdriver	On vehicles with Code (386) Preinstallation for portable cell phone, UPCI system or Code (388) Portable cell phone, UPCI system or Code (494) USA version or Code (498) Japan version	
12	Disconnect electrical connectors (8) and remove spectacles compartment (7)	On vehicles with Code (386) Preinstallation for portable cell phone, UPCI system or Code (388) Portable cell phone, UPCI system or Code (494) USA version or Code (498) Japan version	
13	Unclip stowage compartment illumination (E13/3) from stowage compartment (3), disconnect electrical connector from stowage compartment illumination (E13/3) and stowage compartment illumination (E13/3)		
14	Remove bolts (9)	i Installation: Ensure that front center console (1) is installed without tension.	
15	Pull front center console (1) toward rear until electrical connectors (10) on rear of radio (A2) or COMAND operating, display and controller unit is accessible  Notes on avoiding damage to fiber optic cables during repair work	i Depending on equipment.	AH82.60-P-0001-05TX
16	 Separate electrical connectors (10) Notes on avoiding damage to fiber optic cables during repair work		AH82.60-P-0001-05TX
17	Remove front center console (1)		
18	Install in the reverse order		