


MODEL 219.3

Shown on paneling on left

- 1 Spare wheel cover
- 2 Anchoring hook
- 3 Clip
- 4 Cover
- 5 Paneling
- 6 Rear center section paneling
- 7 Expansion rivet
- 8 Frame

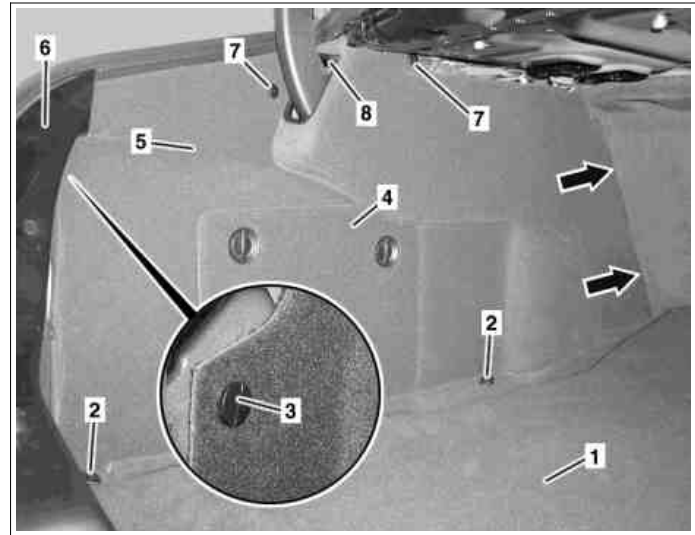

P68.30-3040-11

☒ ☒	Remove/Install		
1	Remove rear center section paneling (6)		AR68.30-P-4785TX
2	Remove anchoring hook (2)	i Note correct installation positions.	
3	Remove expansion rivets (7)	i Installation: Check expansion rivets (7) for proper state, replace if necessary	
4	Remove clip (3)	i Installation: Check clip (3) for proper state, replace if necessary	
5	Remove frame (8).		
6	Remove paneling (5) from trunk	i Installation: Ensure that paneling (5) is seated properly below spare wheel cover (1) and on center paneling (arrows).	
7	Install in the reverse order		