






P61.30-2029-08

**Shown without code (481) Underride guard on left underfloor paneling (1)**

- 1 Underbody paneling  
2 Screw  
3 Nut

- 4 Front axle fender liner  
5 Rear engine compartment paneling

☒ ☒	Remove/install		
1	<p><b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.</p> <p>Raise vehicle with vehicle lift</p>	<p>Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.</p> <p> Adapter kit</p>	<p>AS00.00-Z-0010-01A</p> <p>*203589023100</p>
2	Remove bolts (2)	<p>Rechargeable drill / screwdriver <a href="https://gotis://G_58.0_01.1">gotis://G_58.0_01.1</a></p>	
3	Unscrew nuts (3)	<p> Nuts (3) remain on underfloor paneling (1).</p> <p>Rechargeable drill / screwdriver <a href="https://gotis://G_58.0_01.1">gotis://G_58.0_01.1</a></p>	
4.1	Lower rear engine compartment paneling (5) and front axle fender liner (4).	<p>Engine 271, 272, 273</p> <p> The rear engine compartment paneling (5) may be designed differently depending on the engine and version</p>	
4.2	Lower bottom section of soundproofing and front axle fender liner (4)	<p>Engine 642, 651</p> <p> The bottom section of soundproofing may can be designed differently depending on the engine and equipment</p>	
5	Remove underfloor paneling (1)		
6	Install in the reverse order		

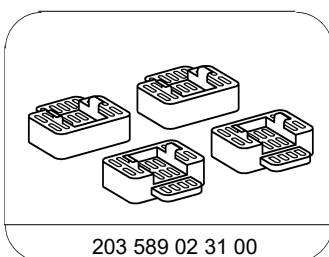

203 589 02 31 00

Adapter kit