


Model	205, 213 with code 233 (DISTRONIC PLUS)
Model	205, 213 with code 239 (Active Distance Assist DISTRONIC)
Model	205, 213 with code 772 (AMG styling package - front spoiler, side skirts and rear apron)
Model	205, 213 with code P15 (AVANTGARDE exterior)
Model	205, 213 with code P76 (Standard exterior equipment and appointments)
Model	238, 253, 293

Modification notes

24.05.2017	Disconnect electrical connector on Mercedes star included.	Operation steps 2, 3	
------------	--	----------------------	--

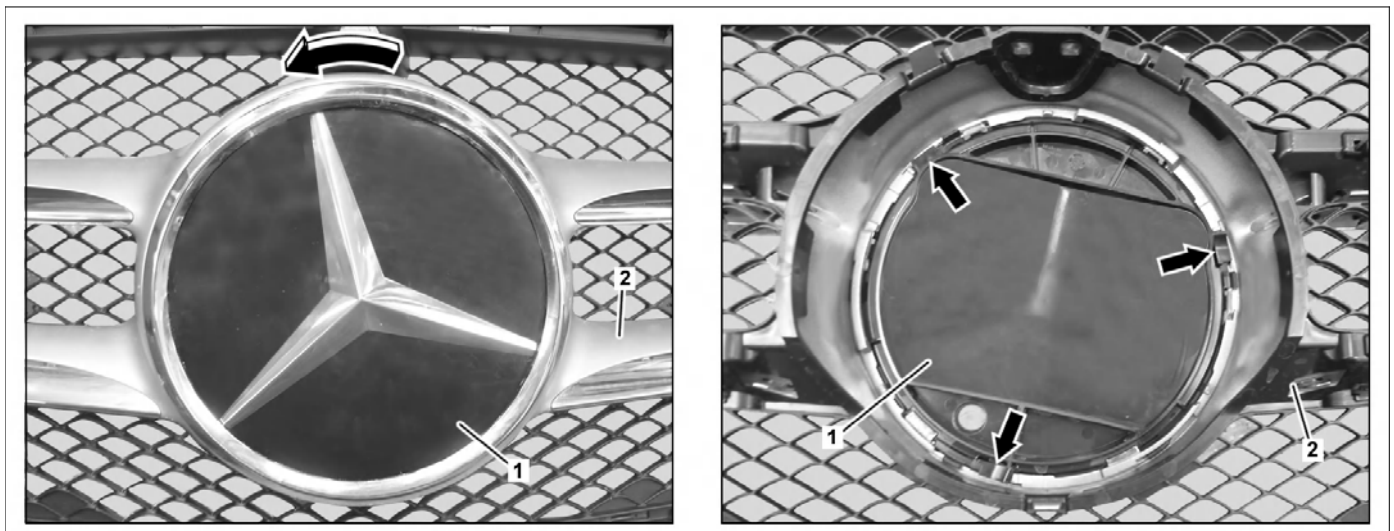

P88.40-3138-08

1 Mercedes star

2 Radiator trim

	Remove		
1	Turn Mercedes star (1) approx. 15° in direction of arrow and remove from radiator grille (2)		
2	Disconnect electrical connector on Mercedes star (1)	Model 205, 213, 238 with code 233 (DISTRONIC PLUS) Model 205, 213, 238 with code 239 (Active Distance Assist DISTRONIC)	
	Install		
3	Connect electrical connector on Mercedes star (1)	Model 205, 213, 238 with code 233 (DISTRONIC PLUS) Model 205, 213, 238 with code 239 (Active Distance Assist DISTRONIC)	
4	Insert Mercedes star (1) into radiator grille (2) with catch hooks (arrows) as shown and turn approx. 15° in the opposite direction to the arrow		